



# BARRY MBE-3Spr

Инструкция по сборке

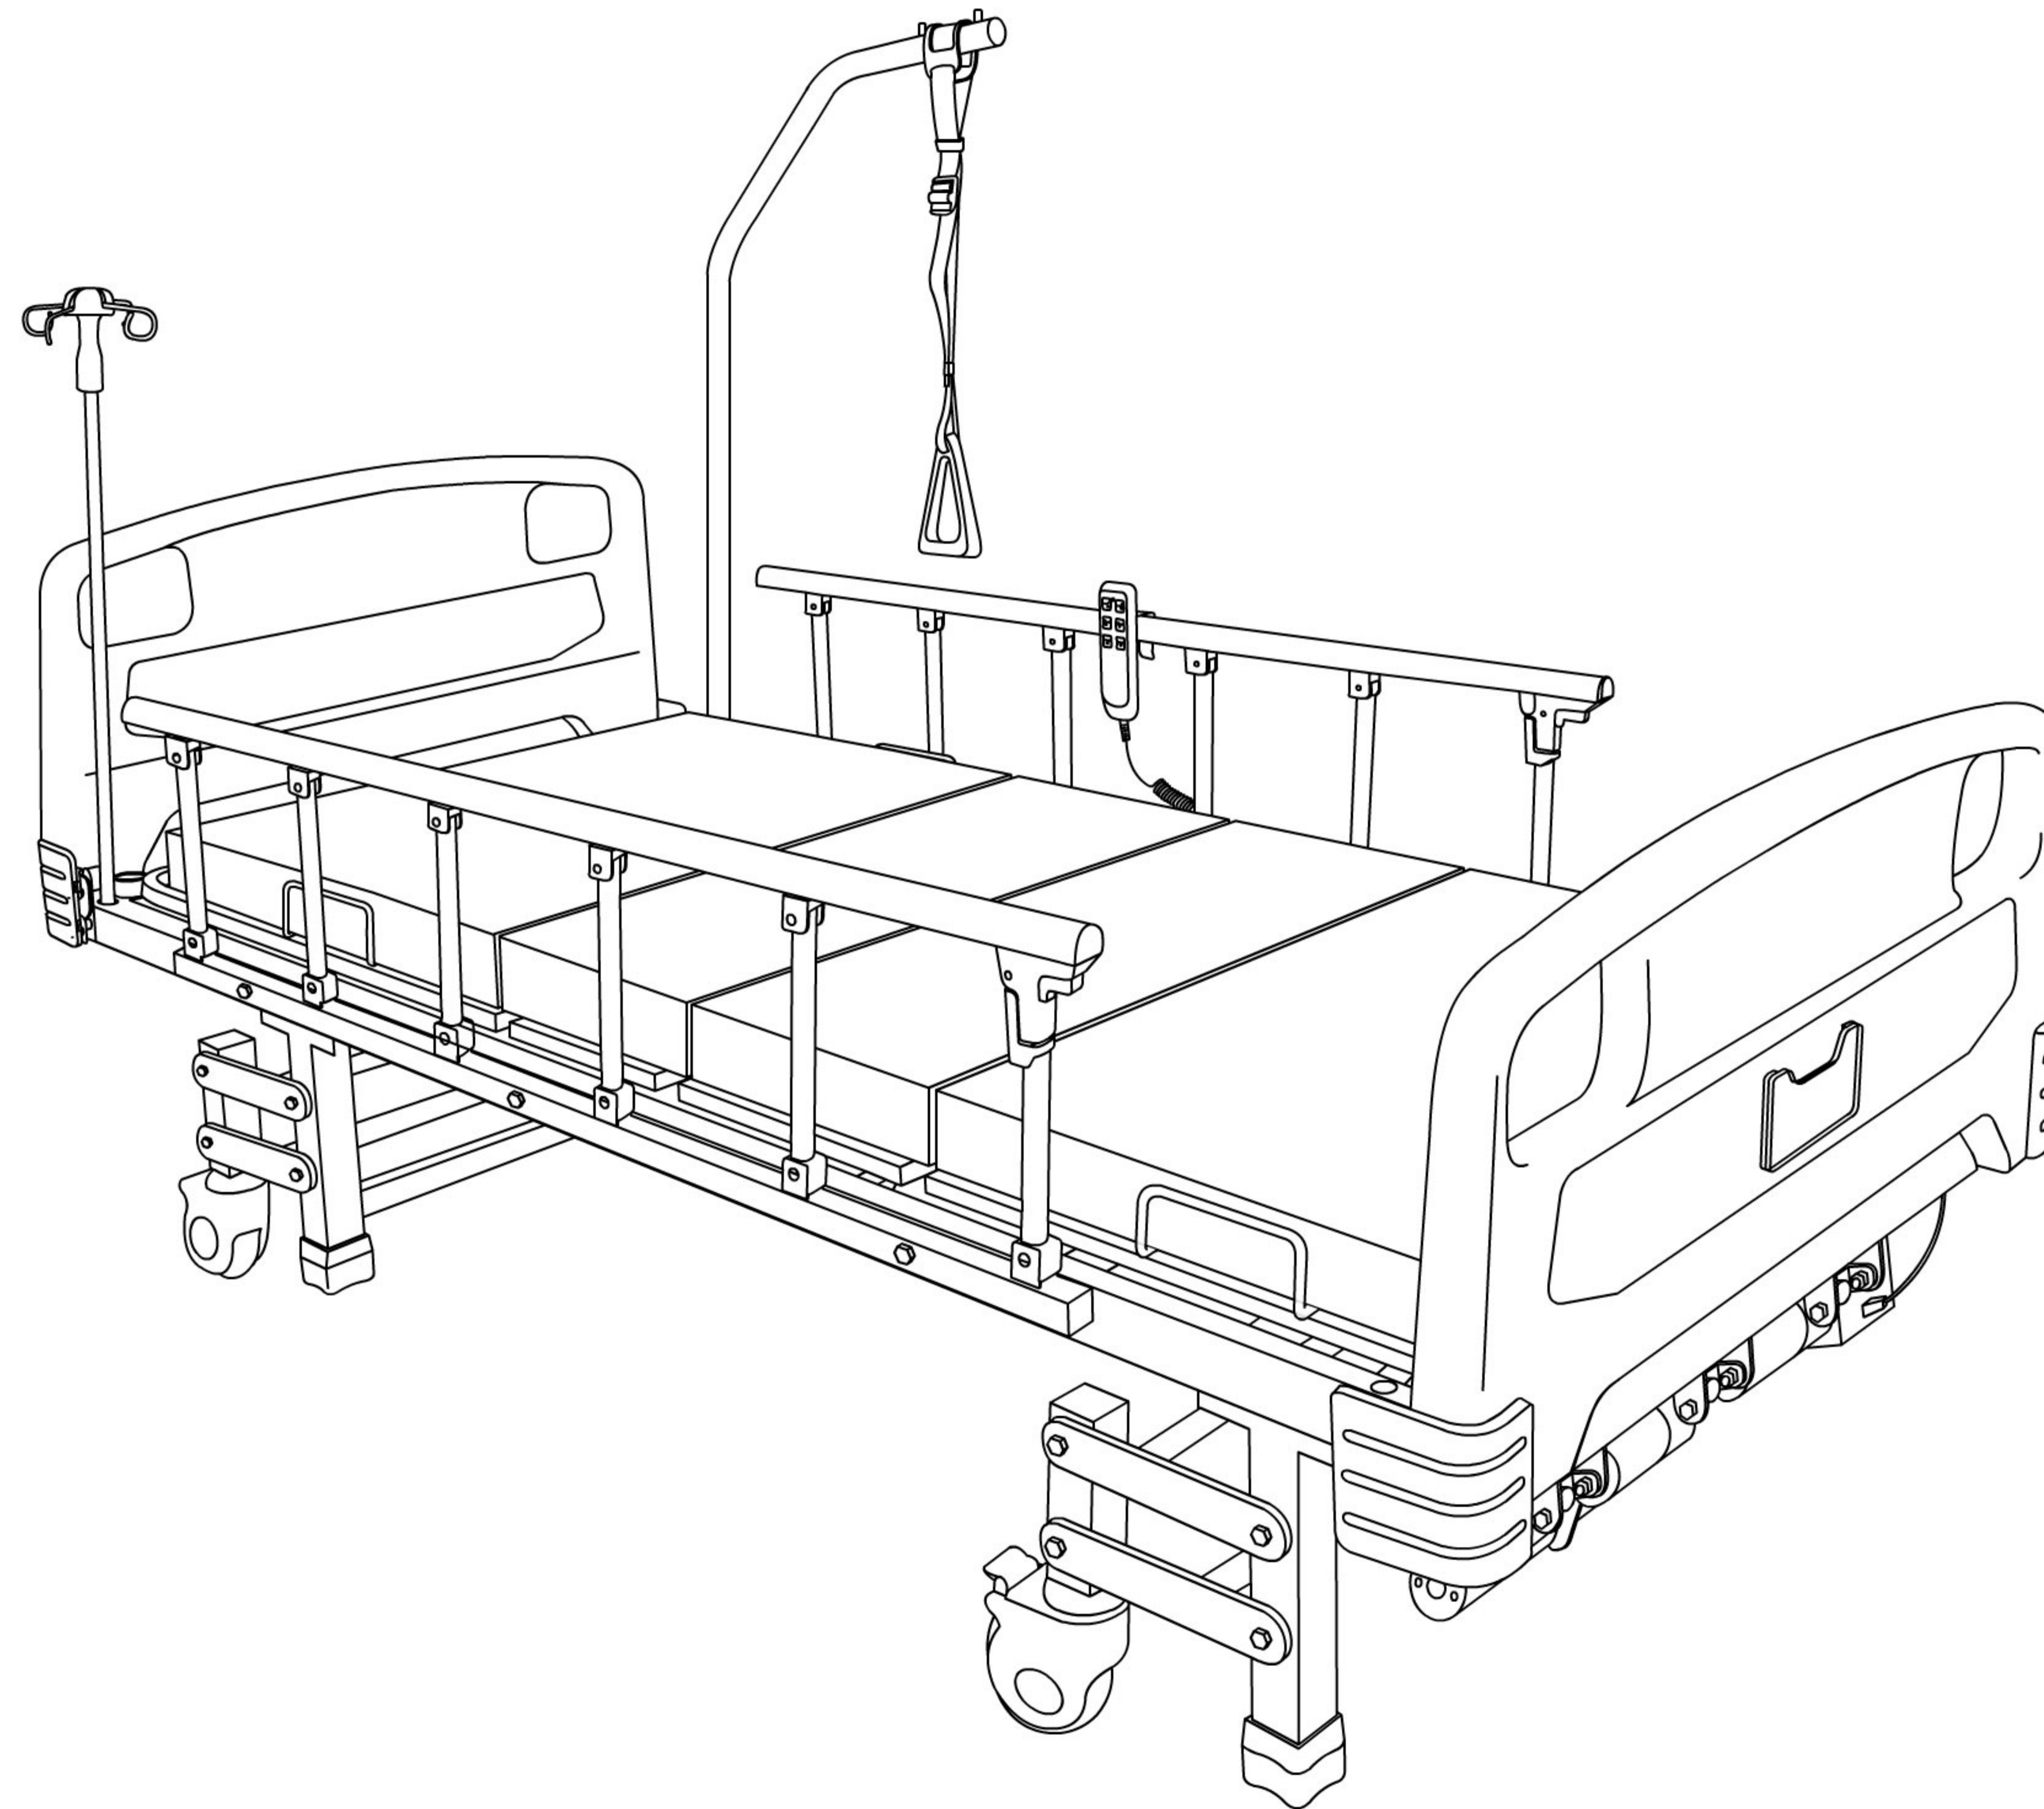

1

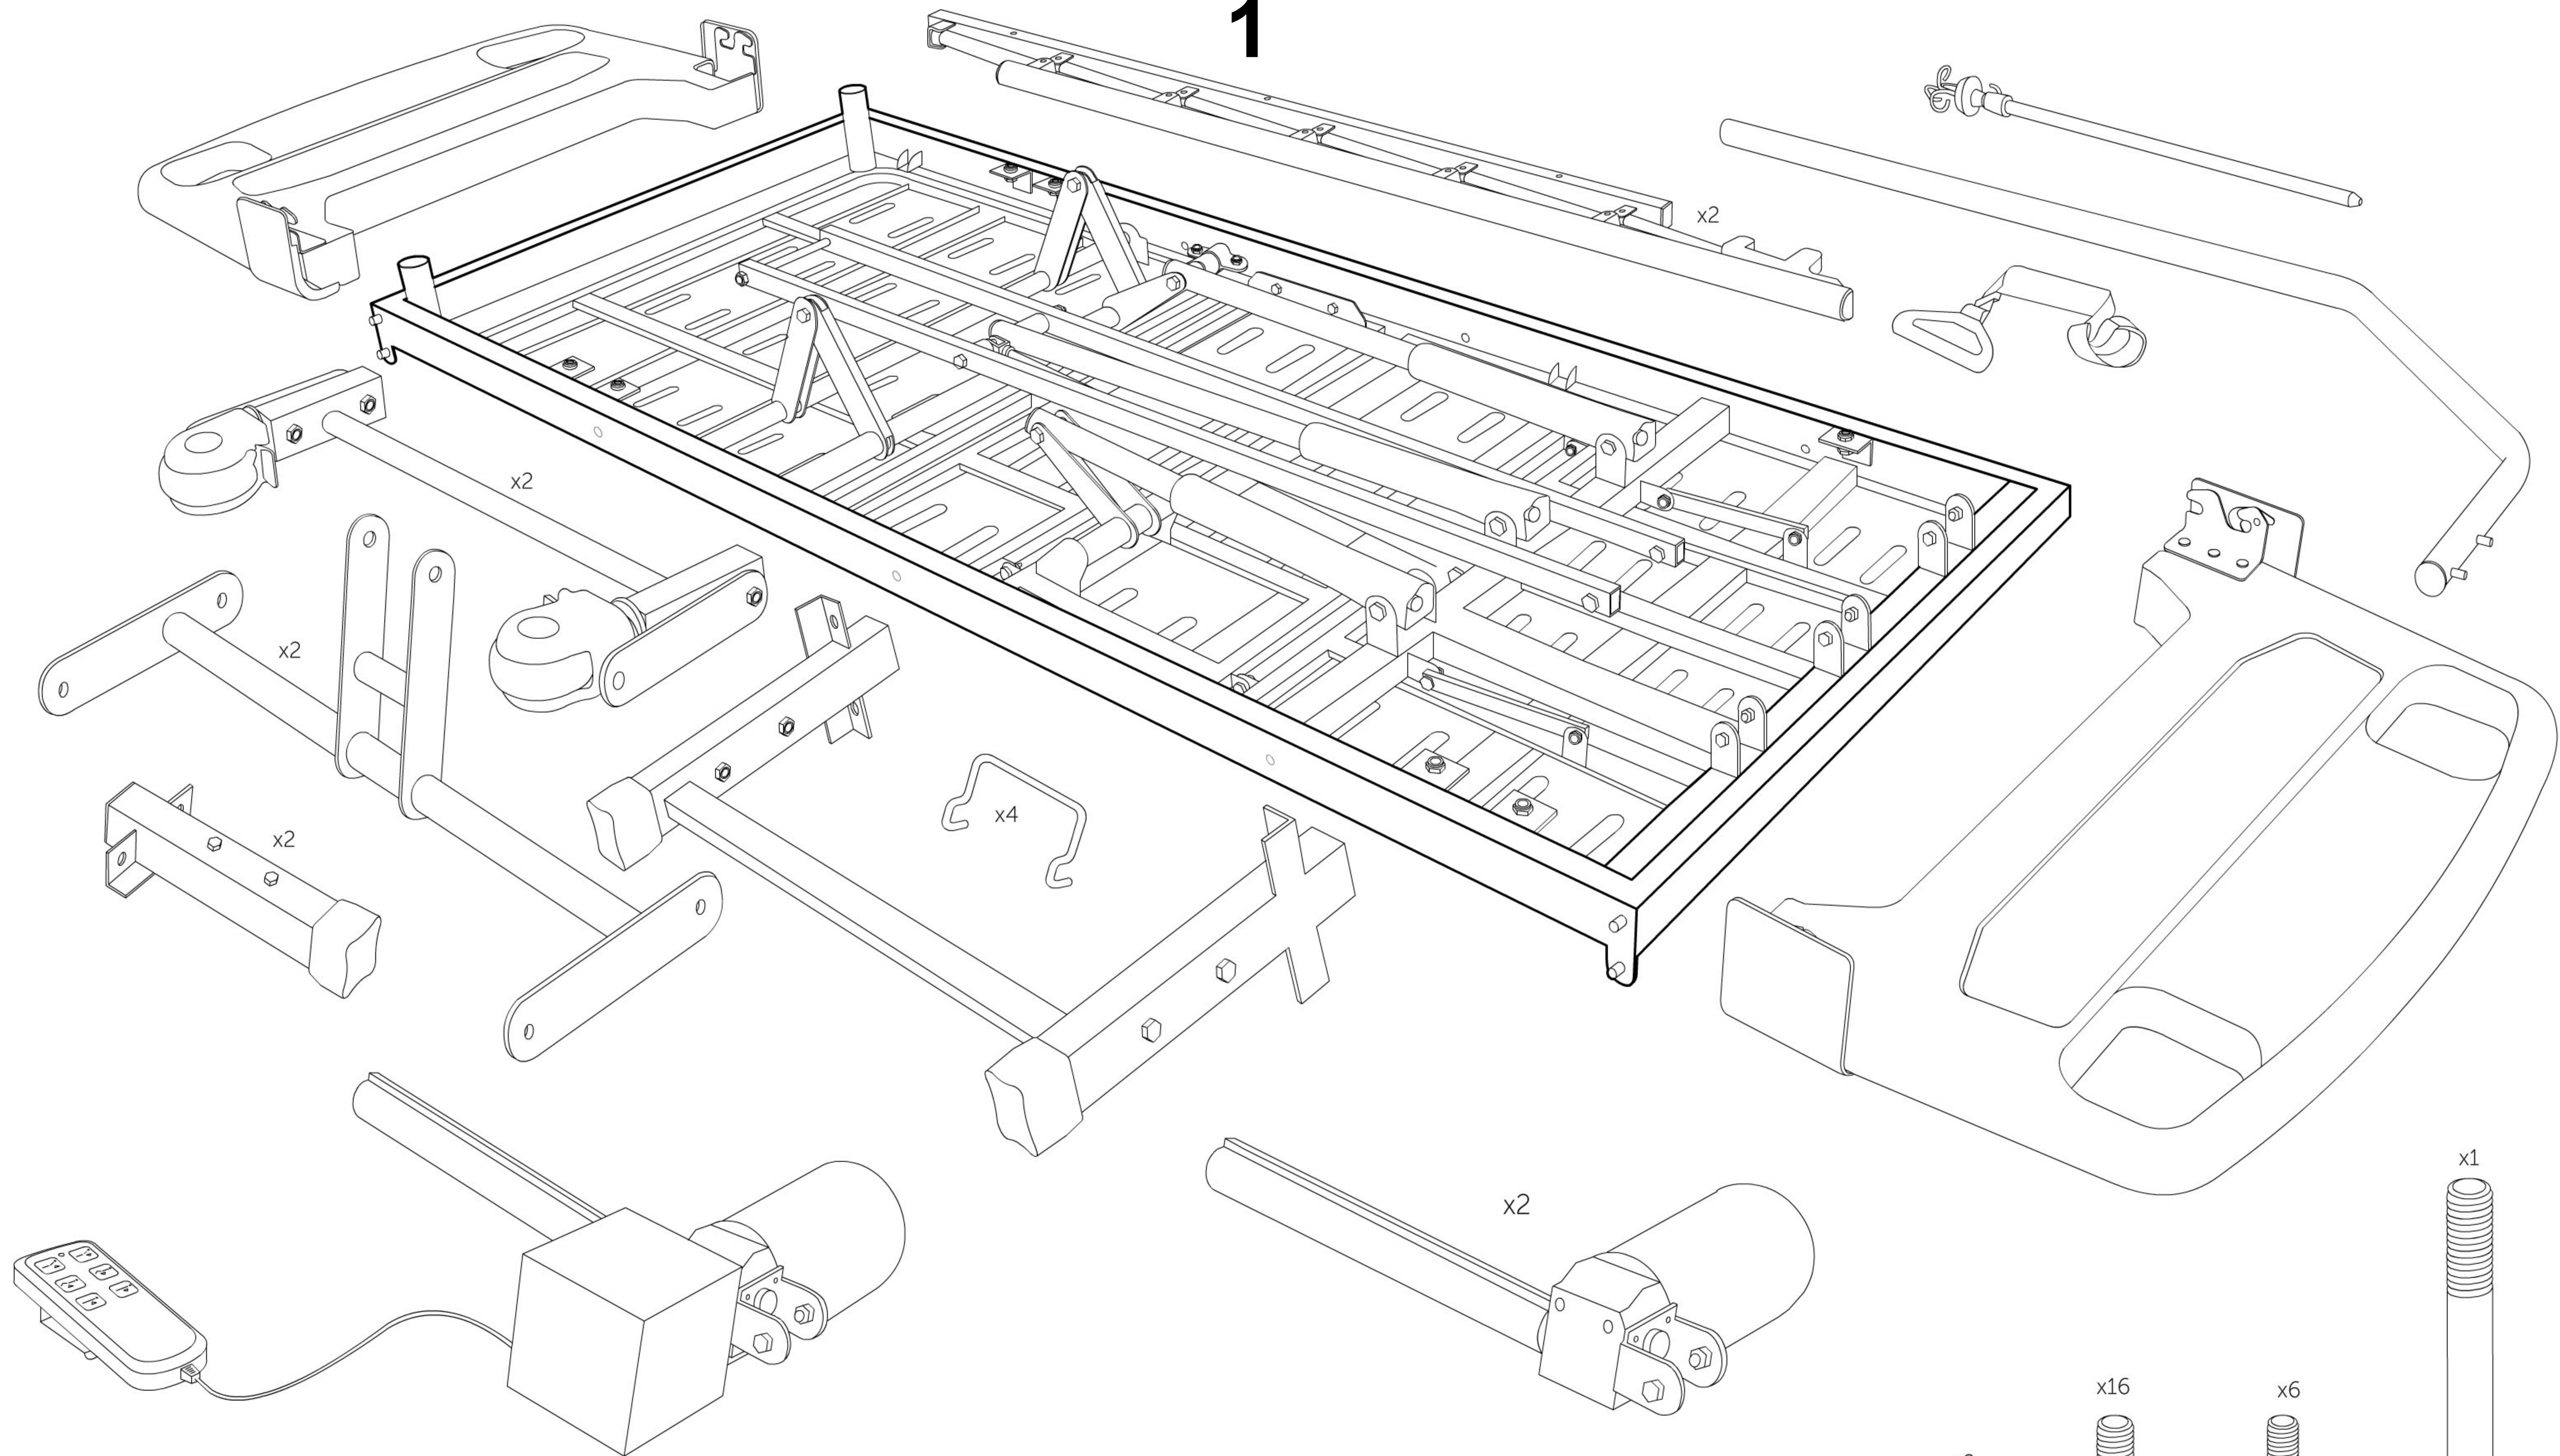

x6  
Шайба 6мм

x24  
Шайба 8мм

x1  
Шайба 10мм

x32  
Гайка M8

x1  
Гайка M10

x14  
Болт M8x20


x2  
Болт M8x40

x16  
Болт M8x80


x6  
Болт M6x80

x1  
Болт M10x200


2

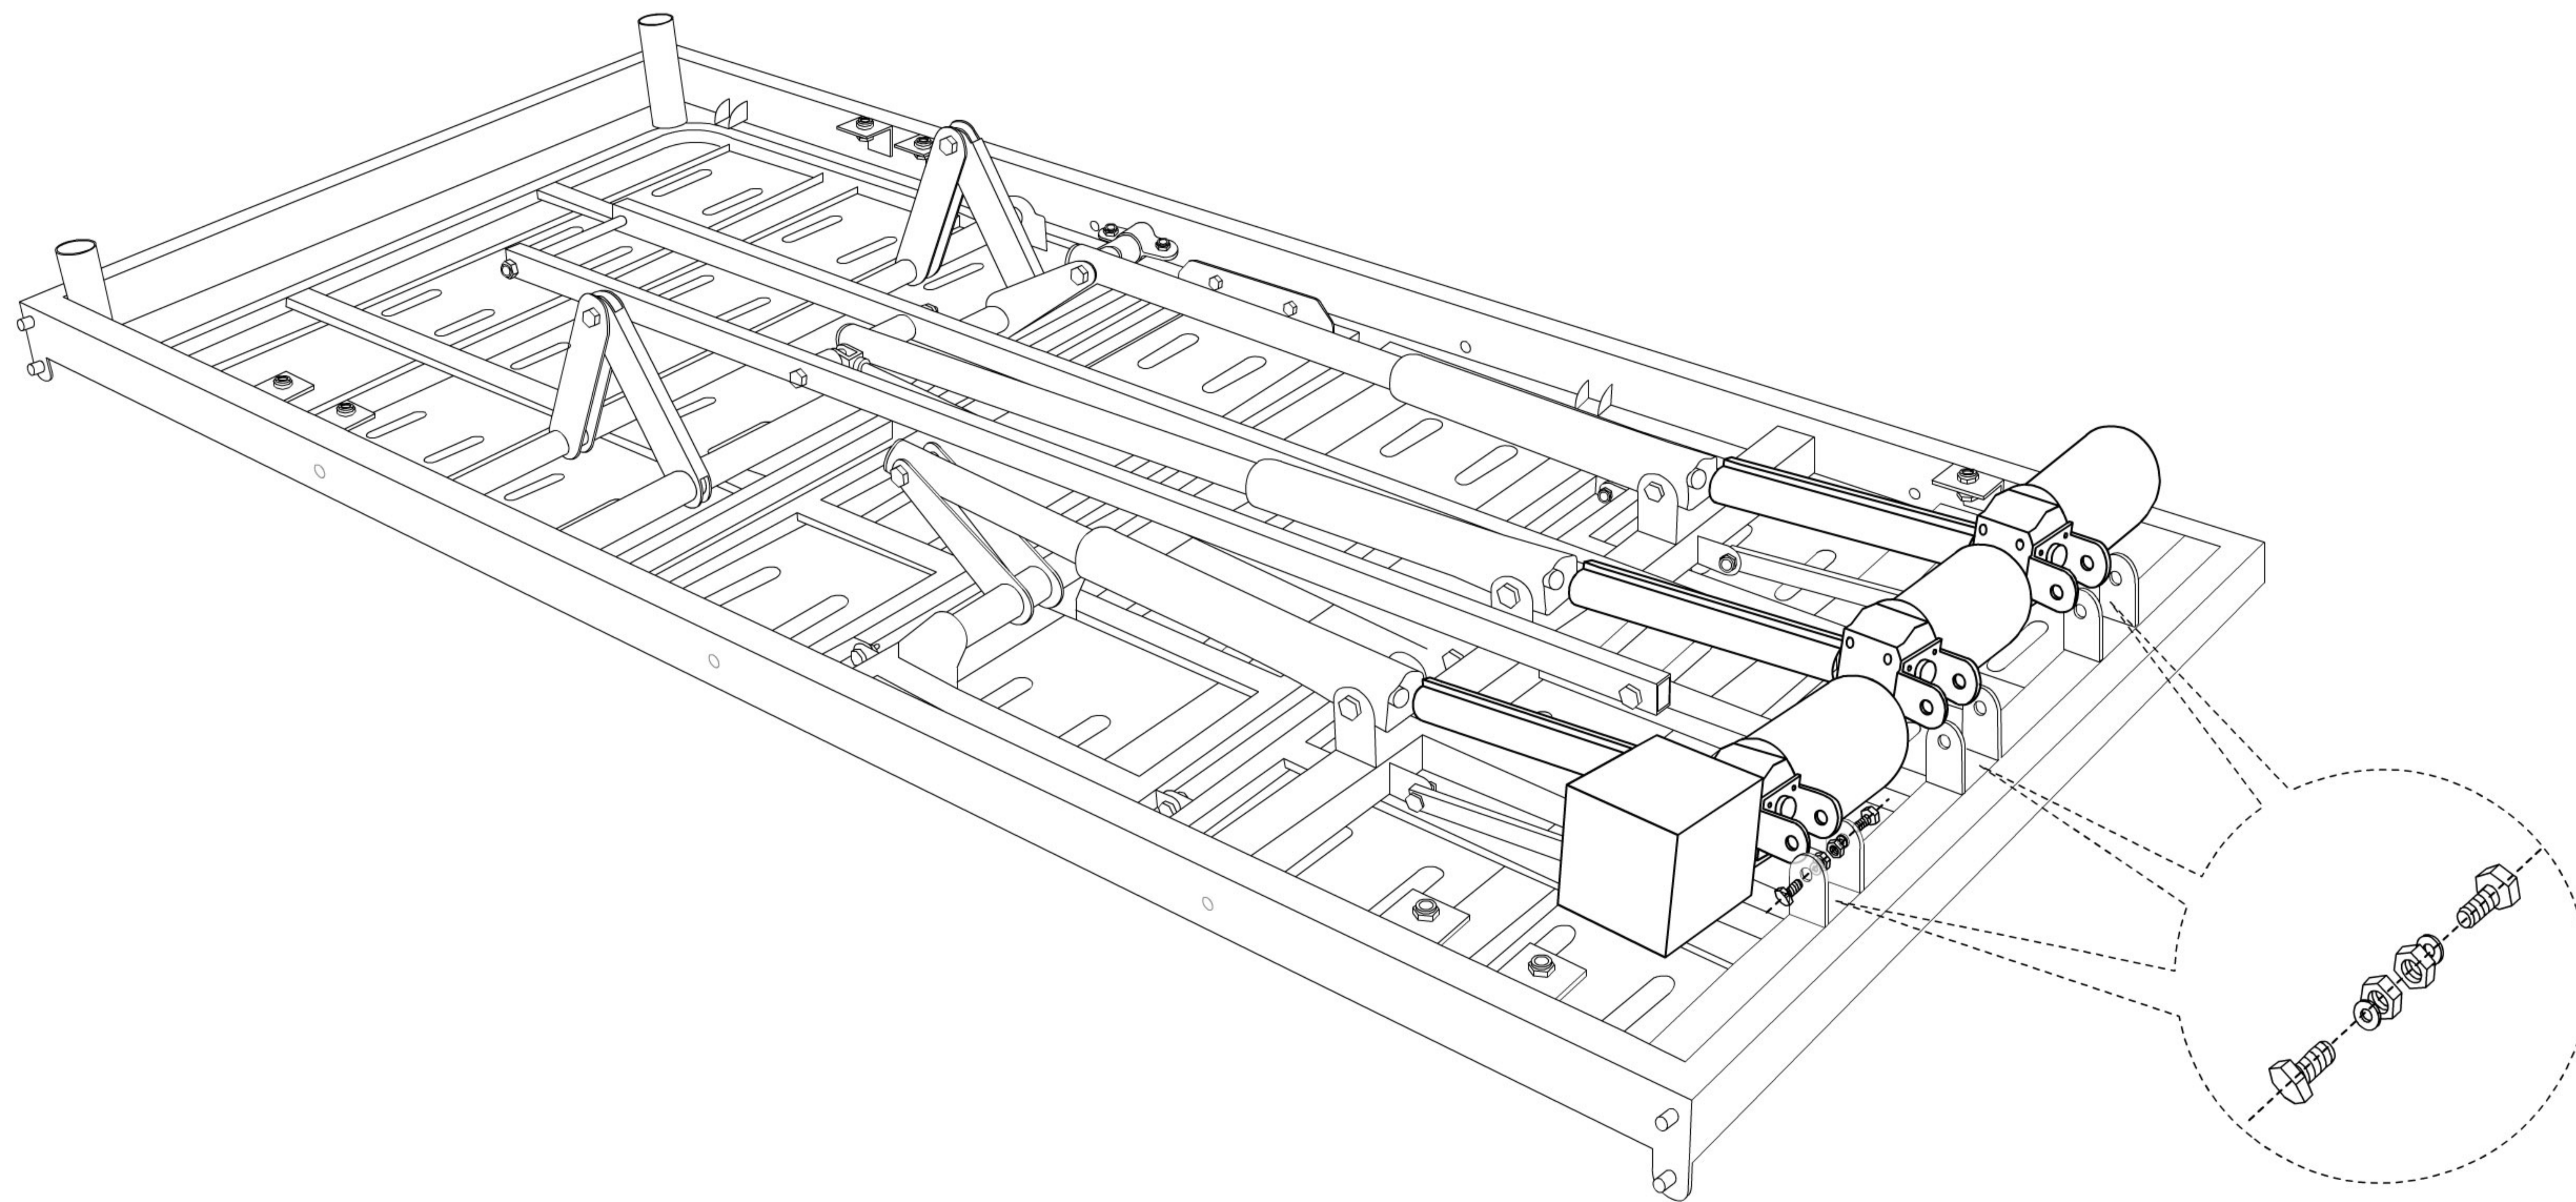


3

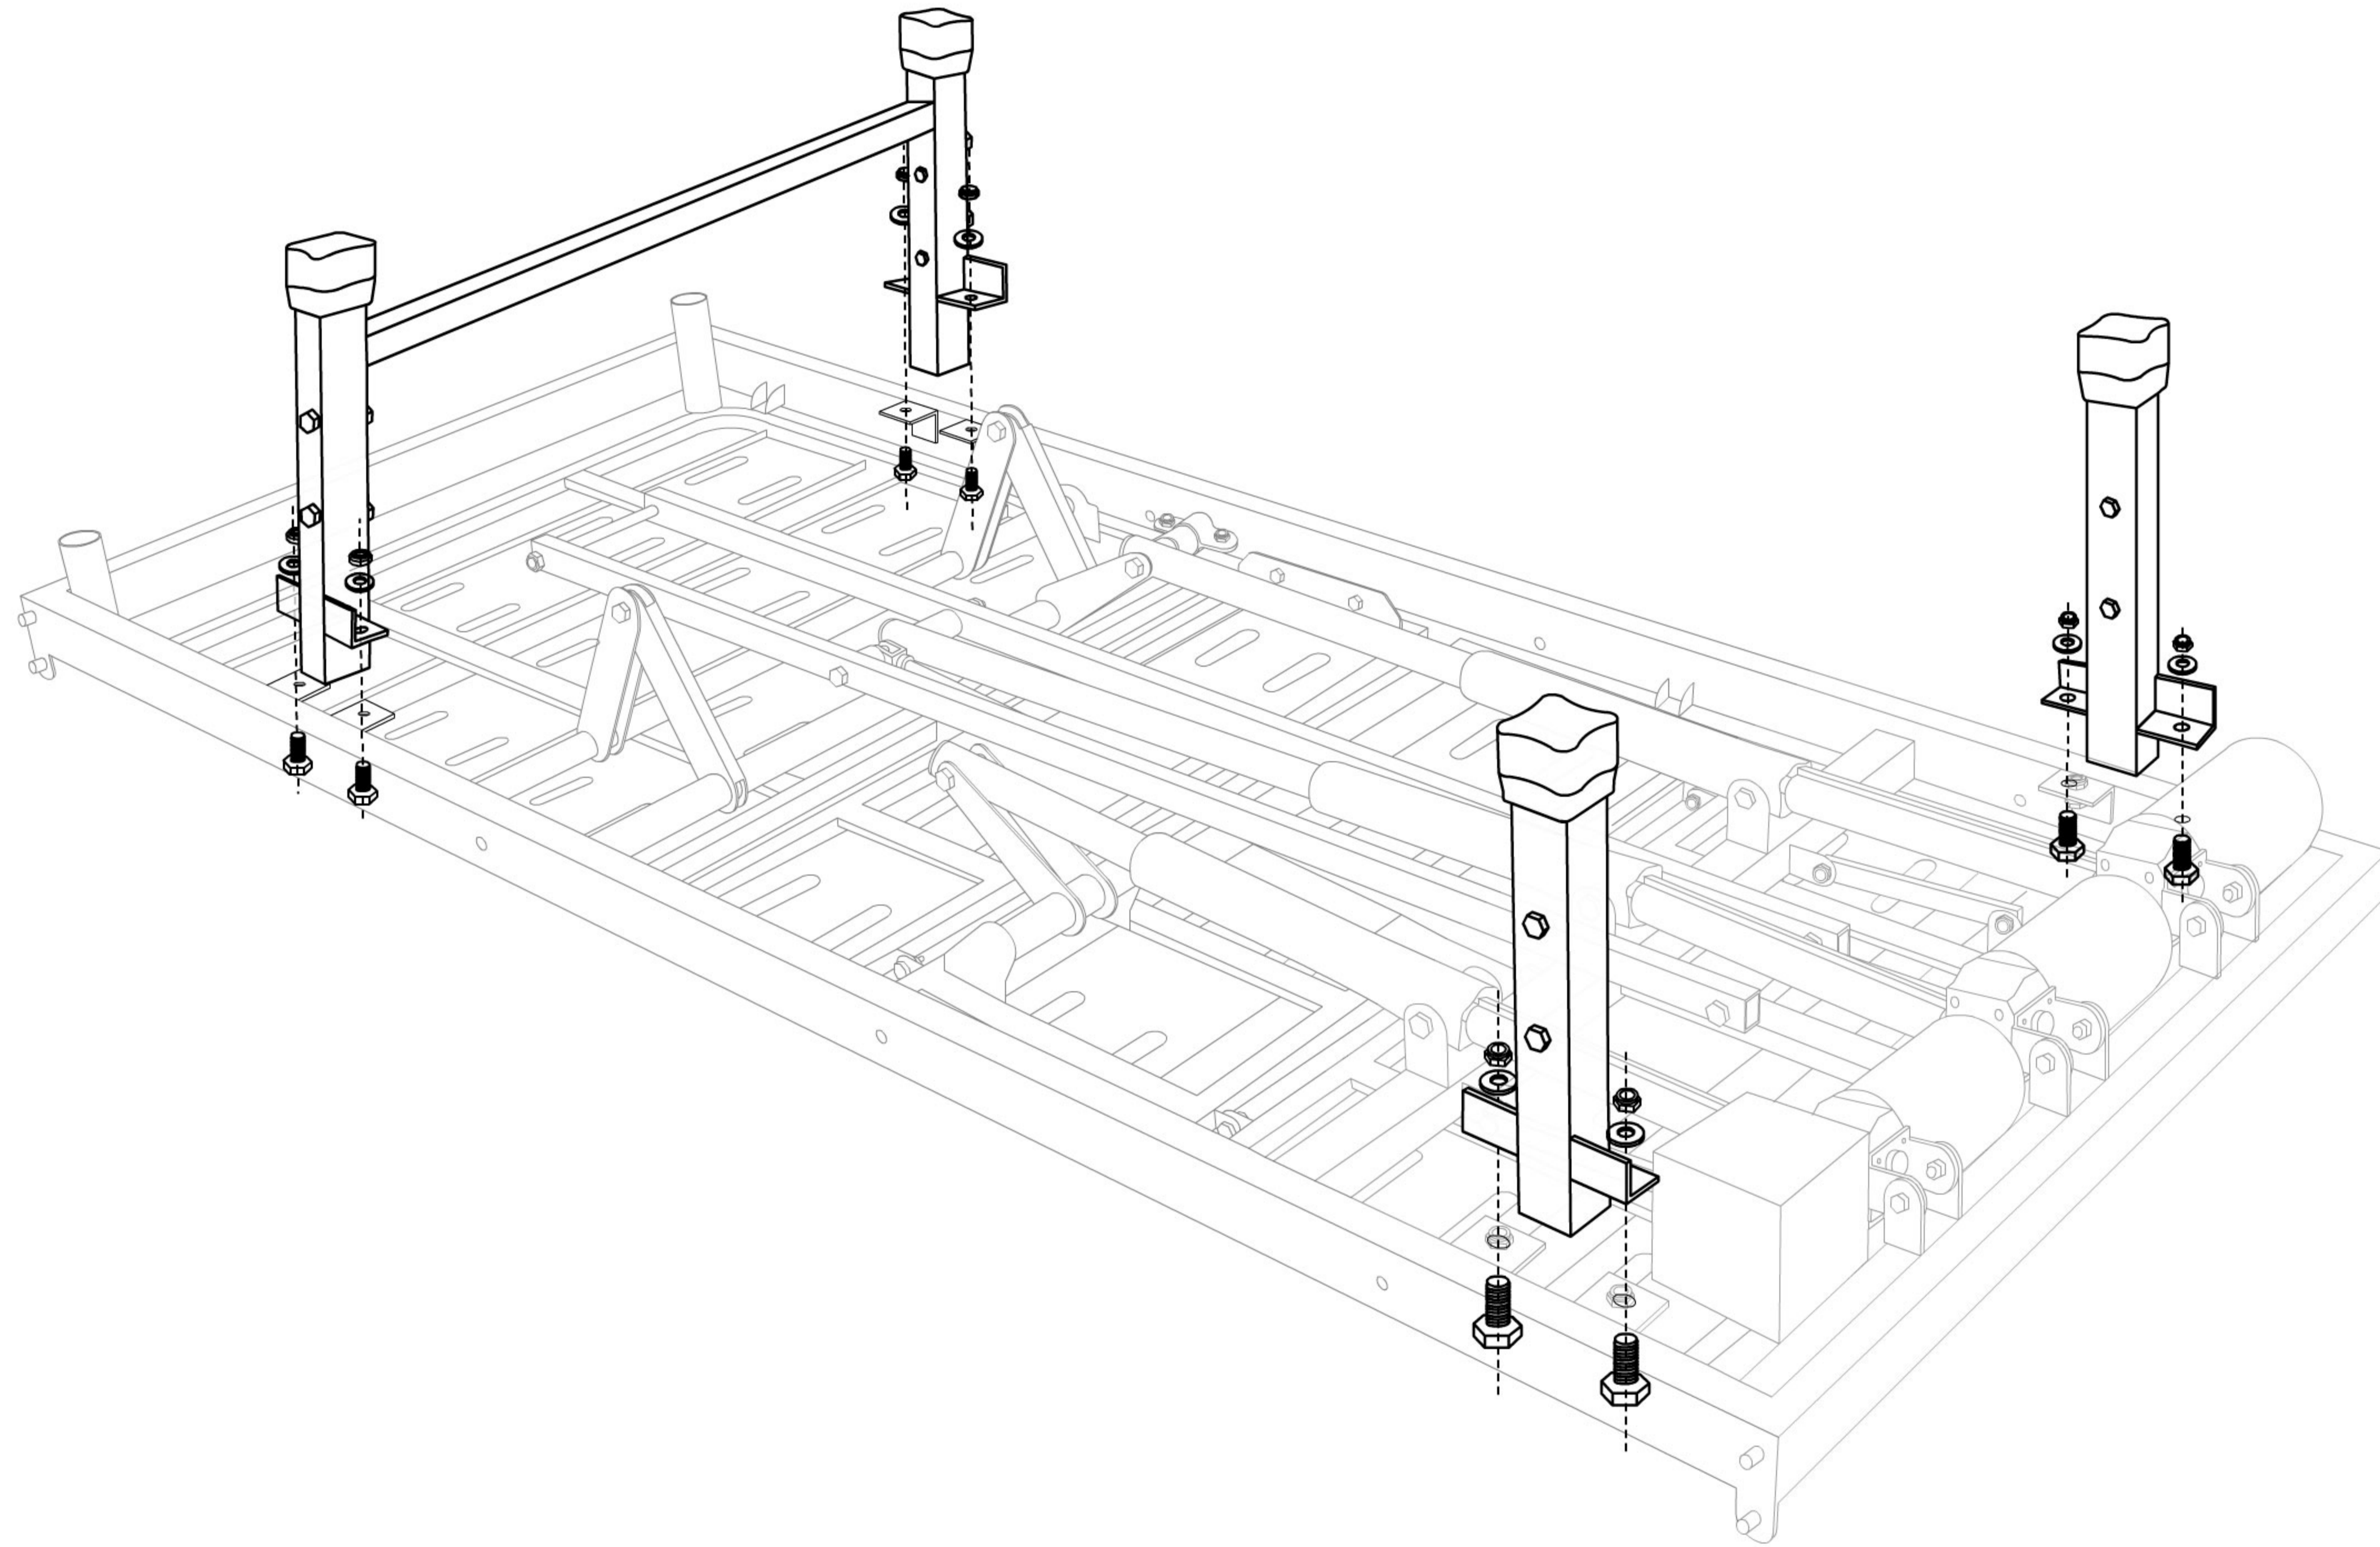


4

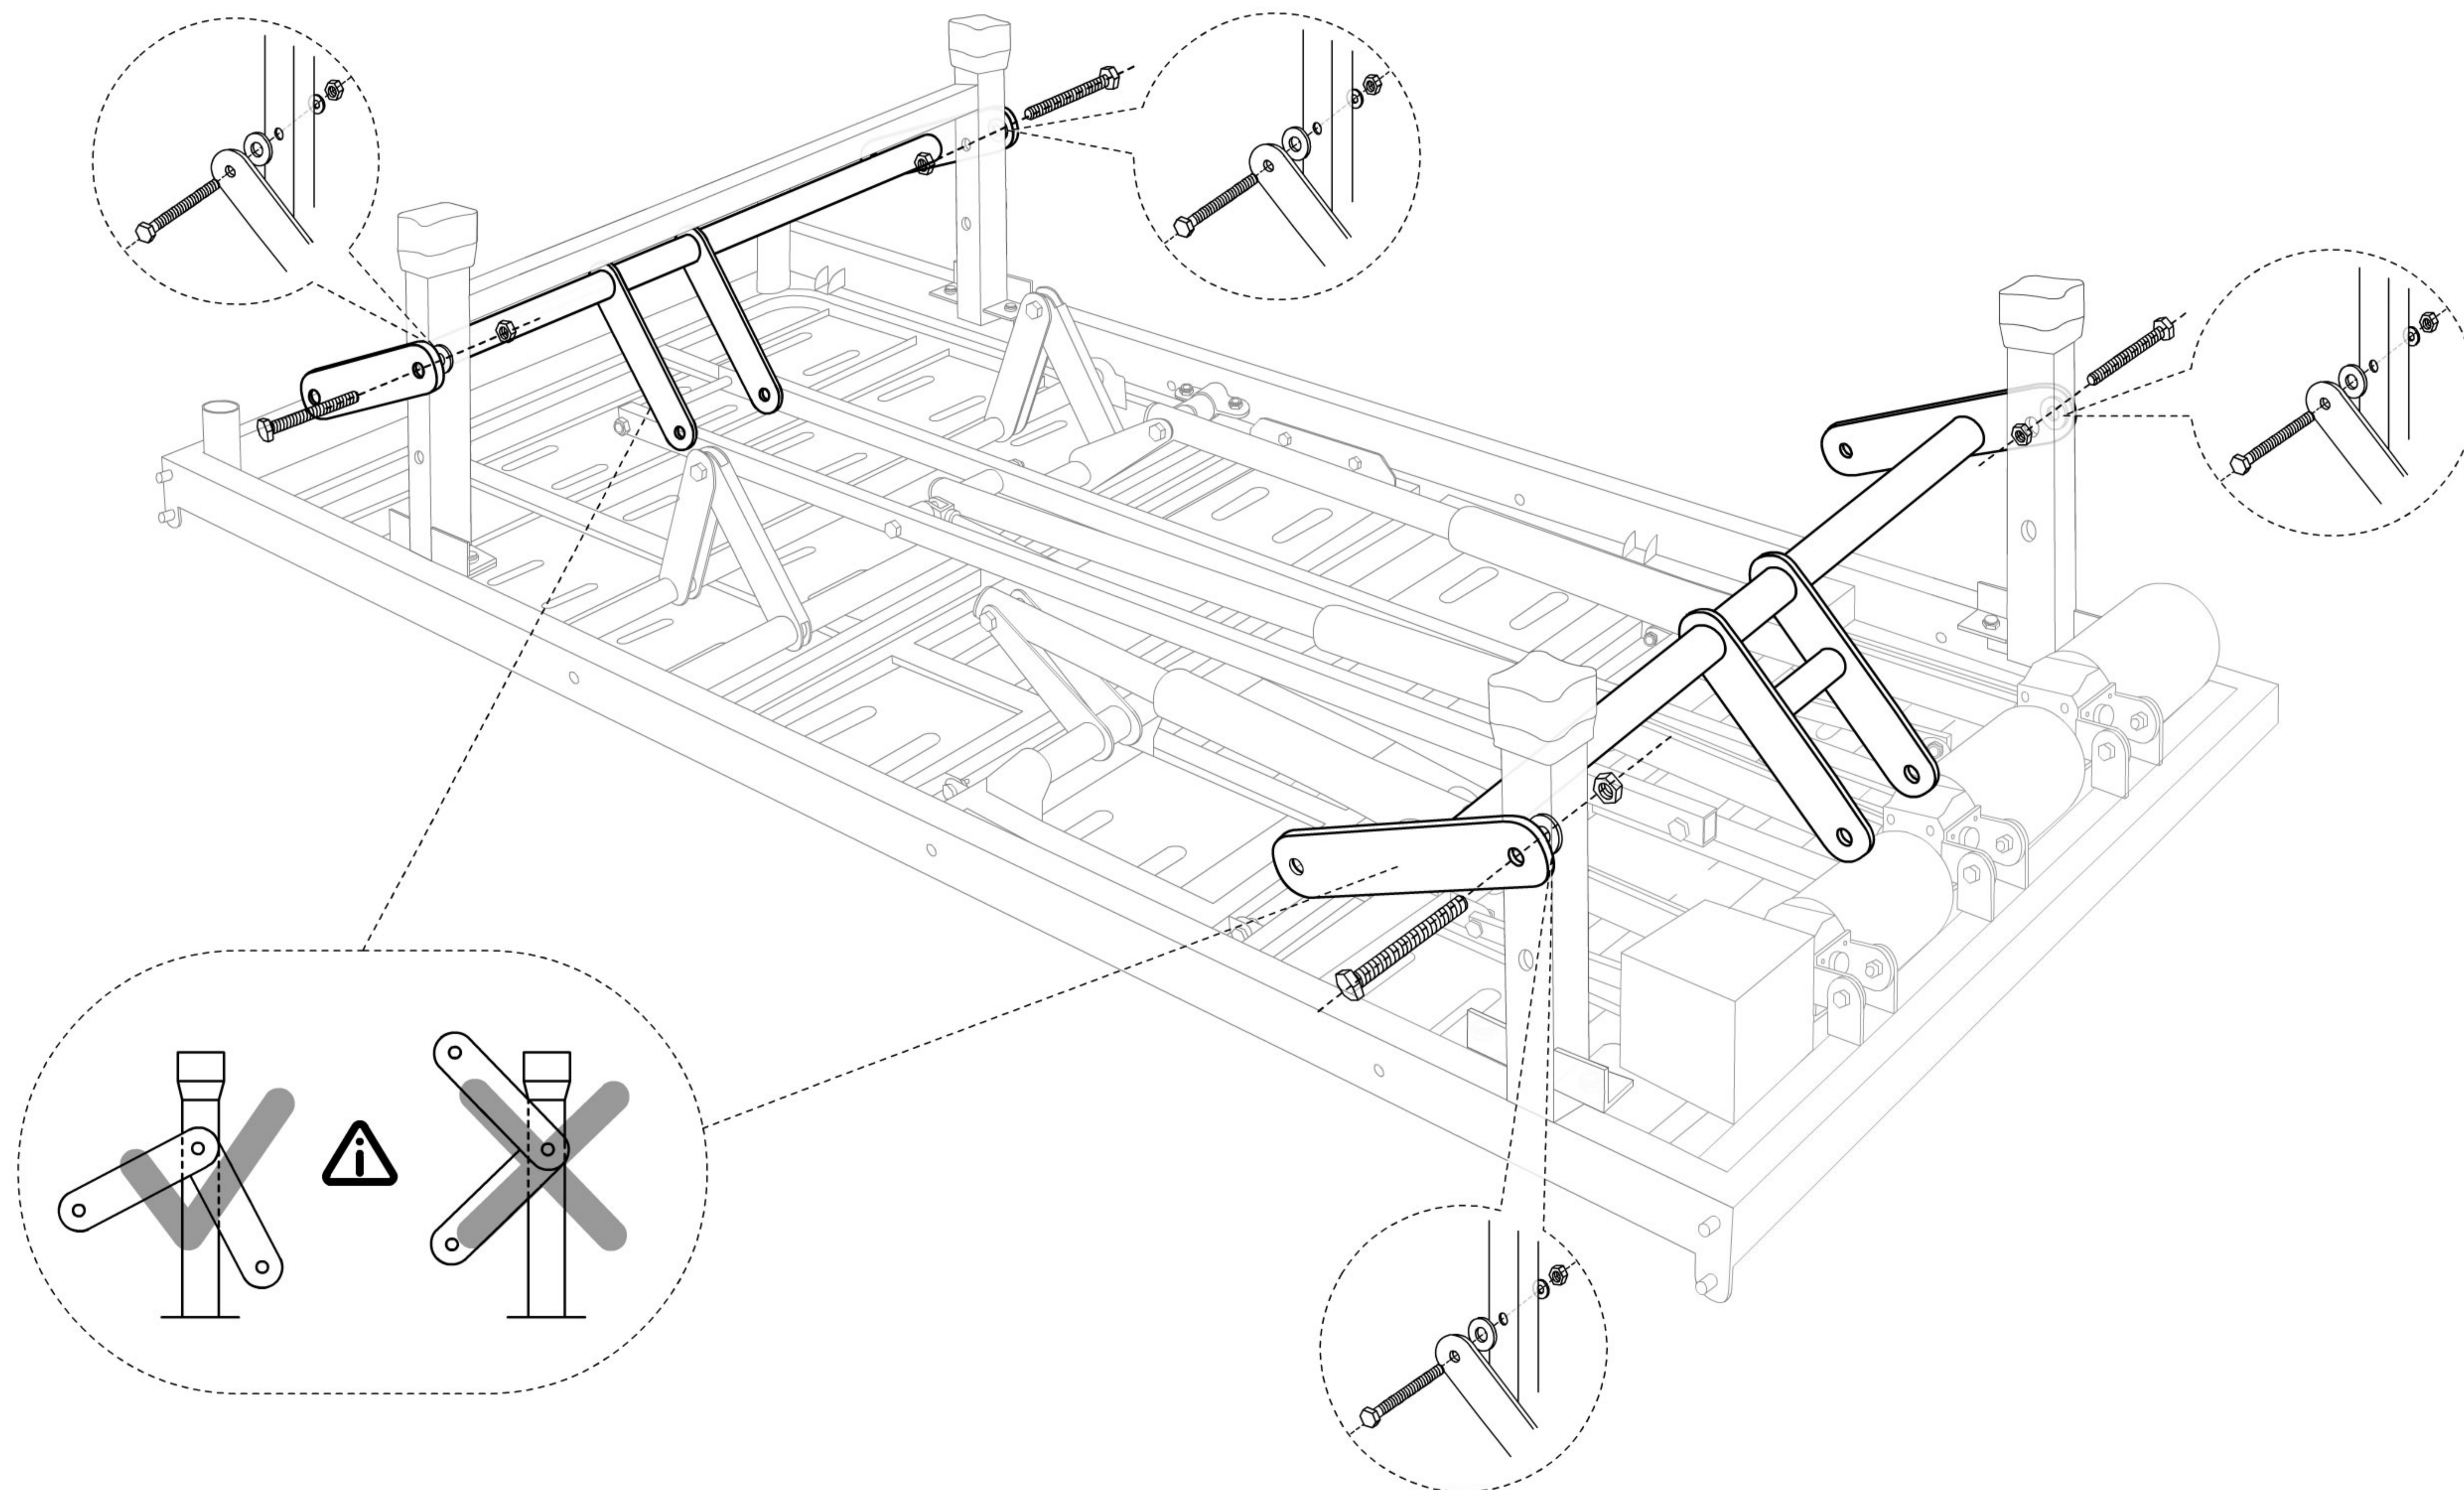


5

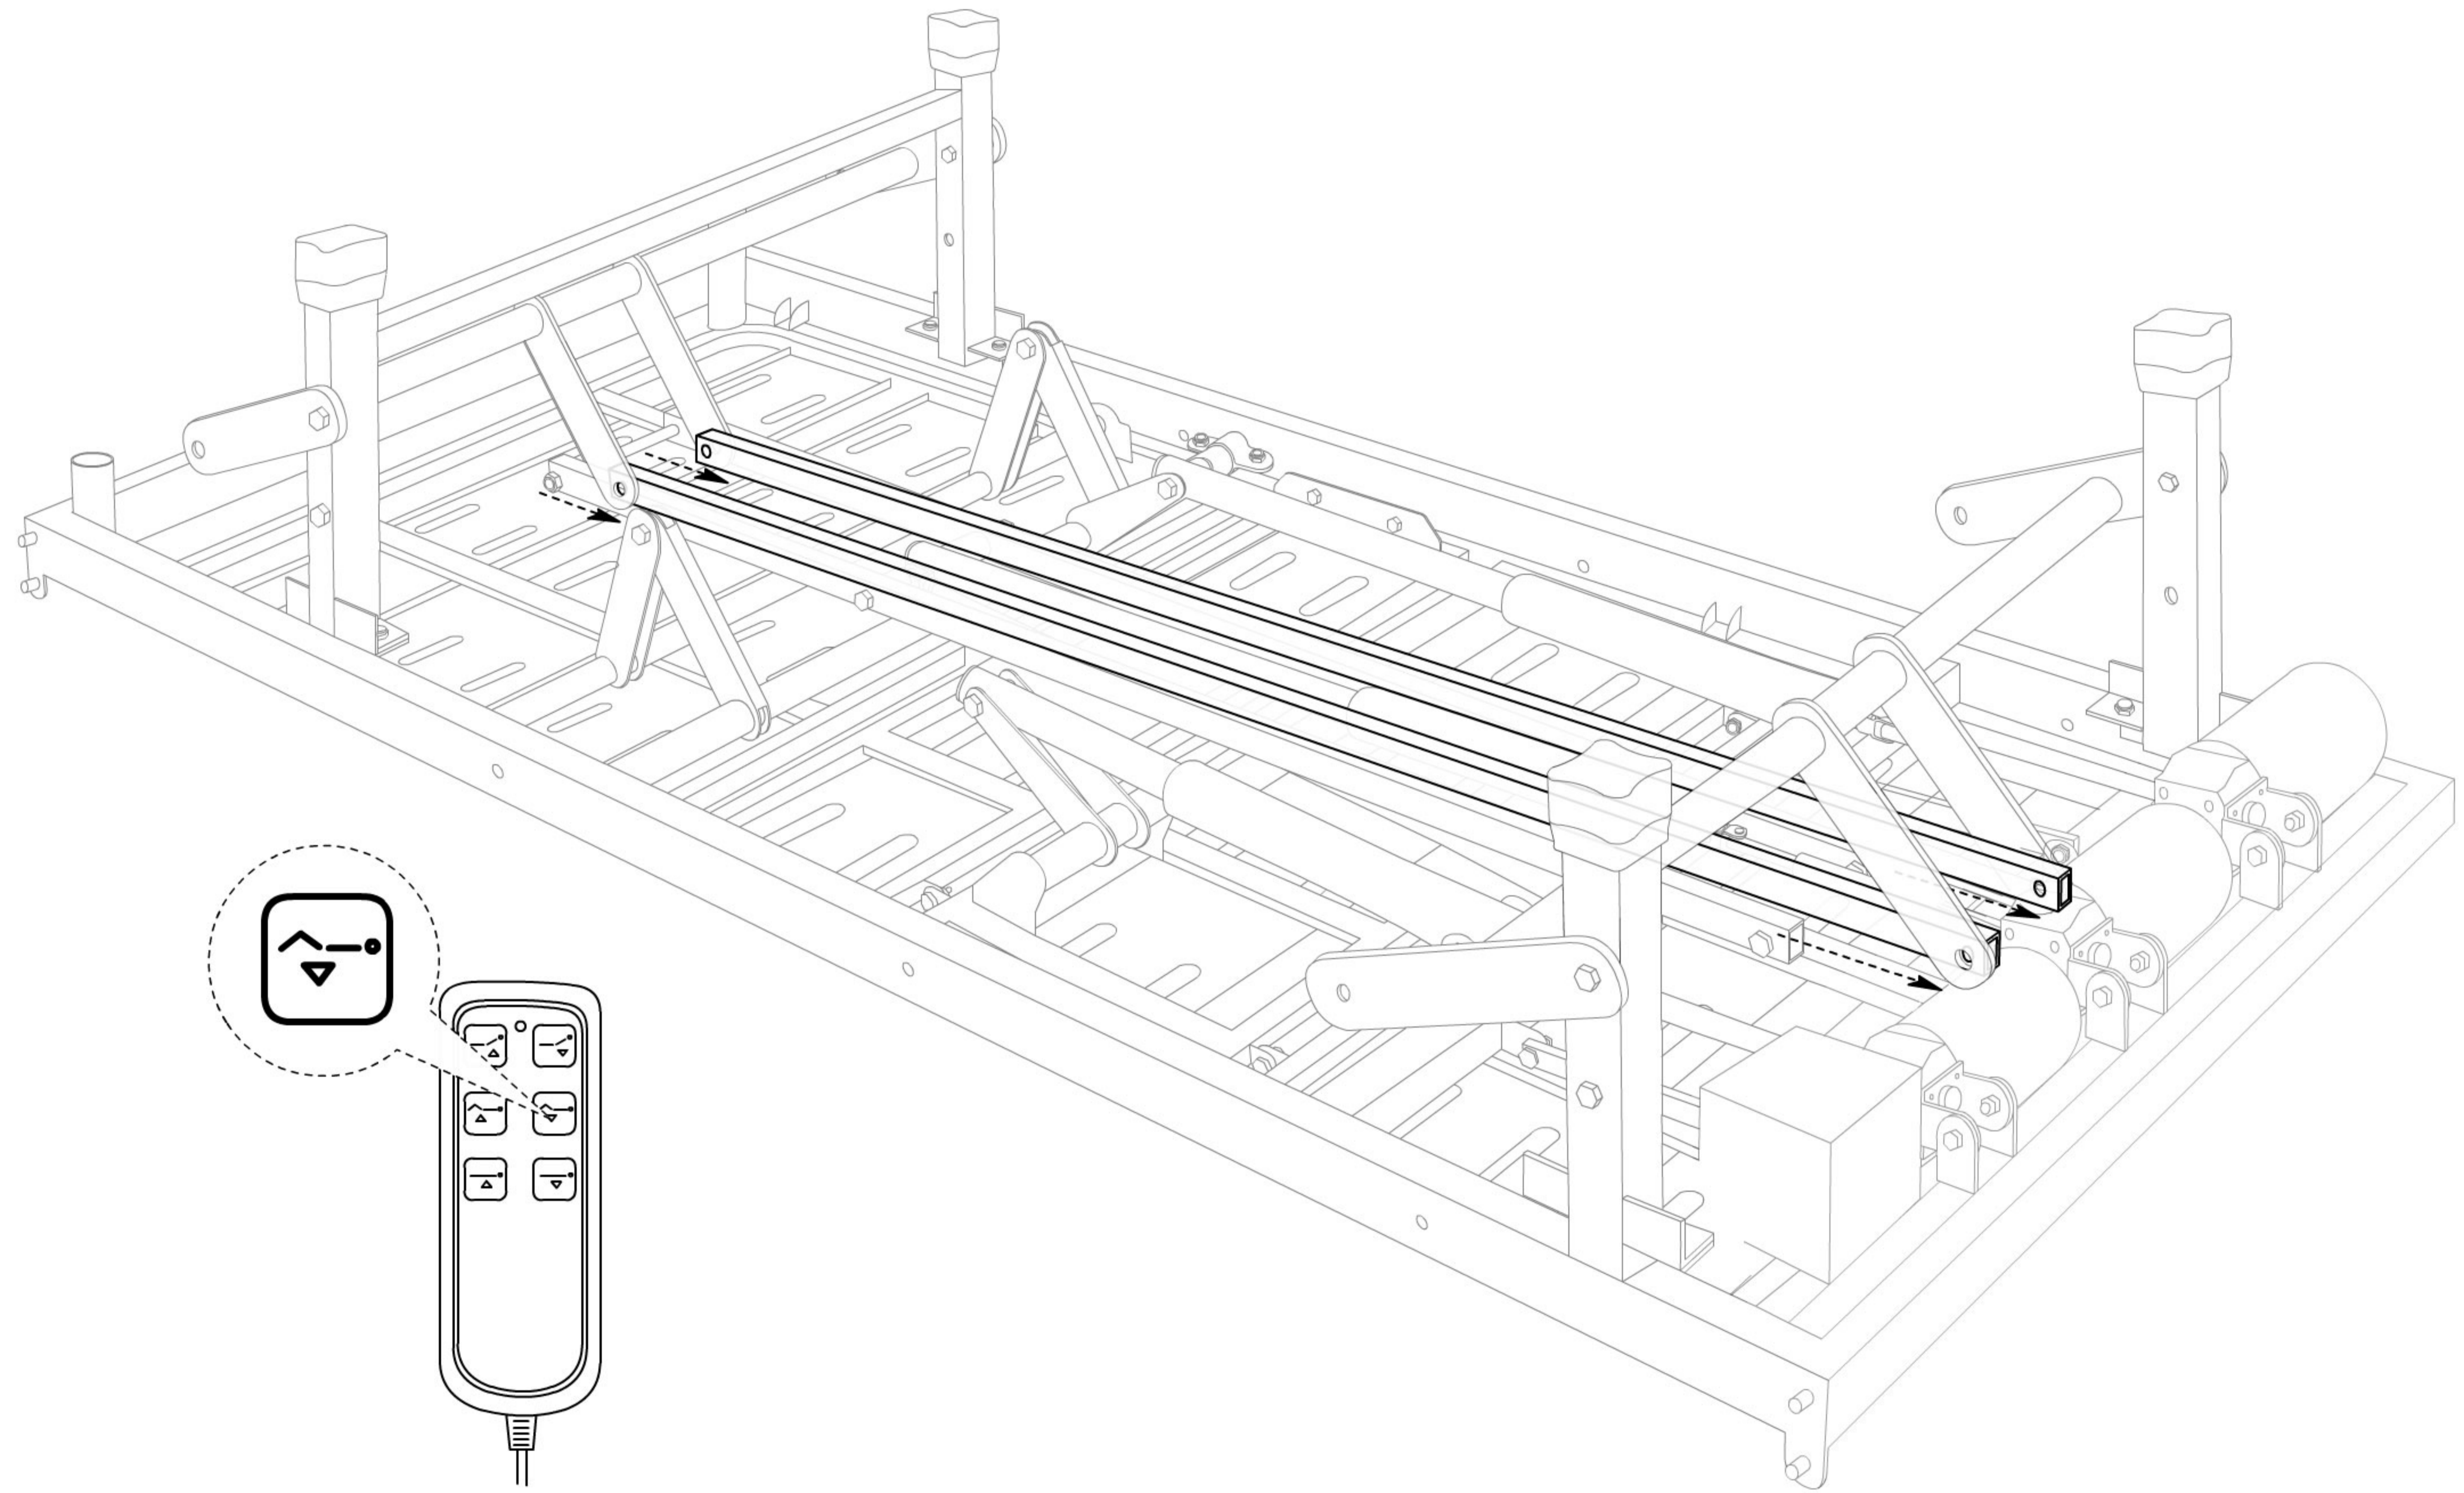

6

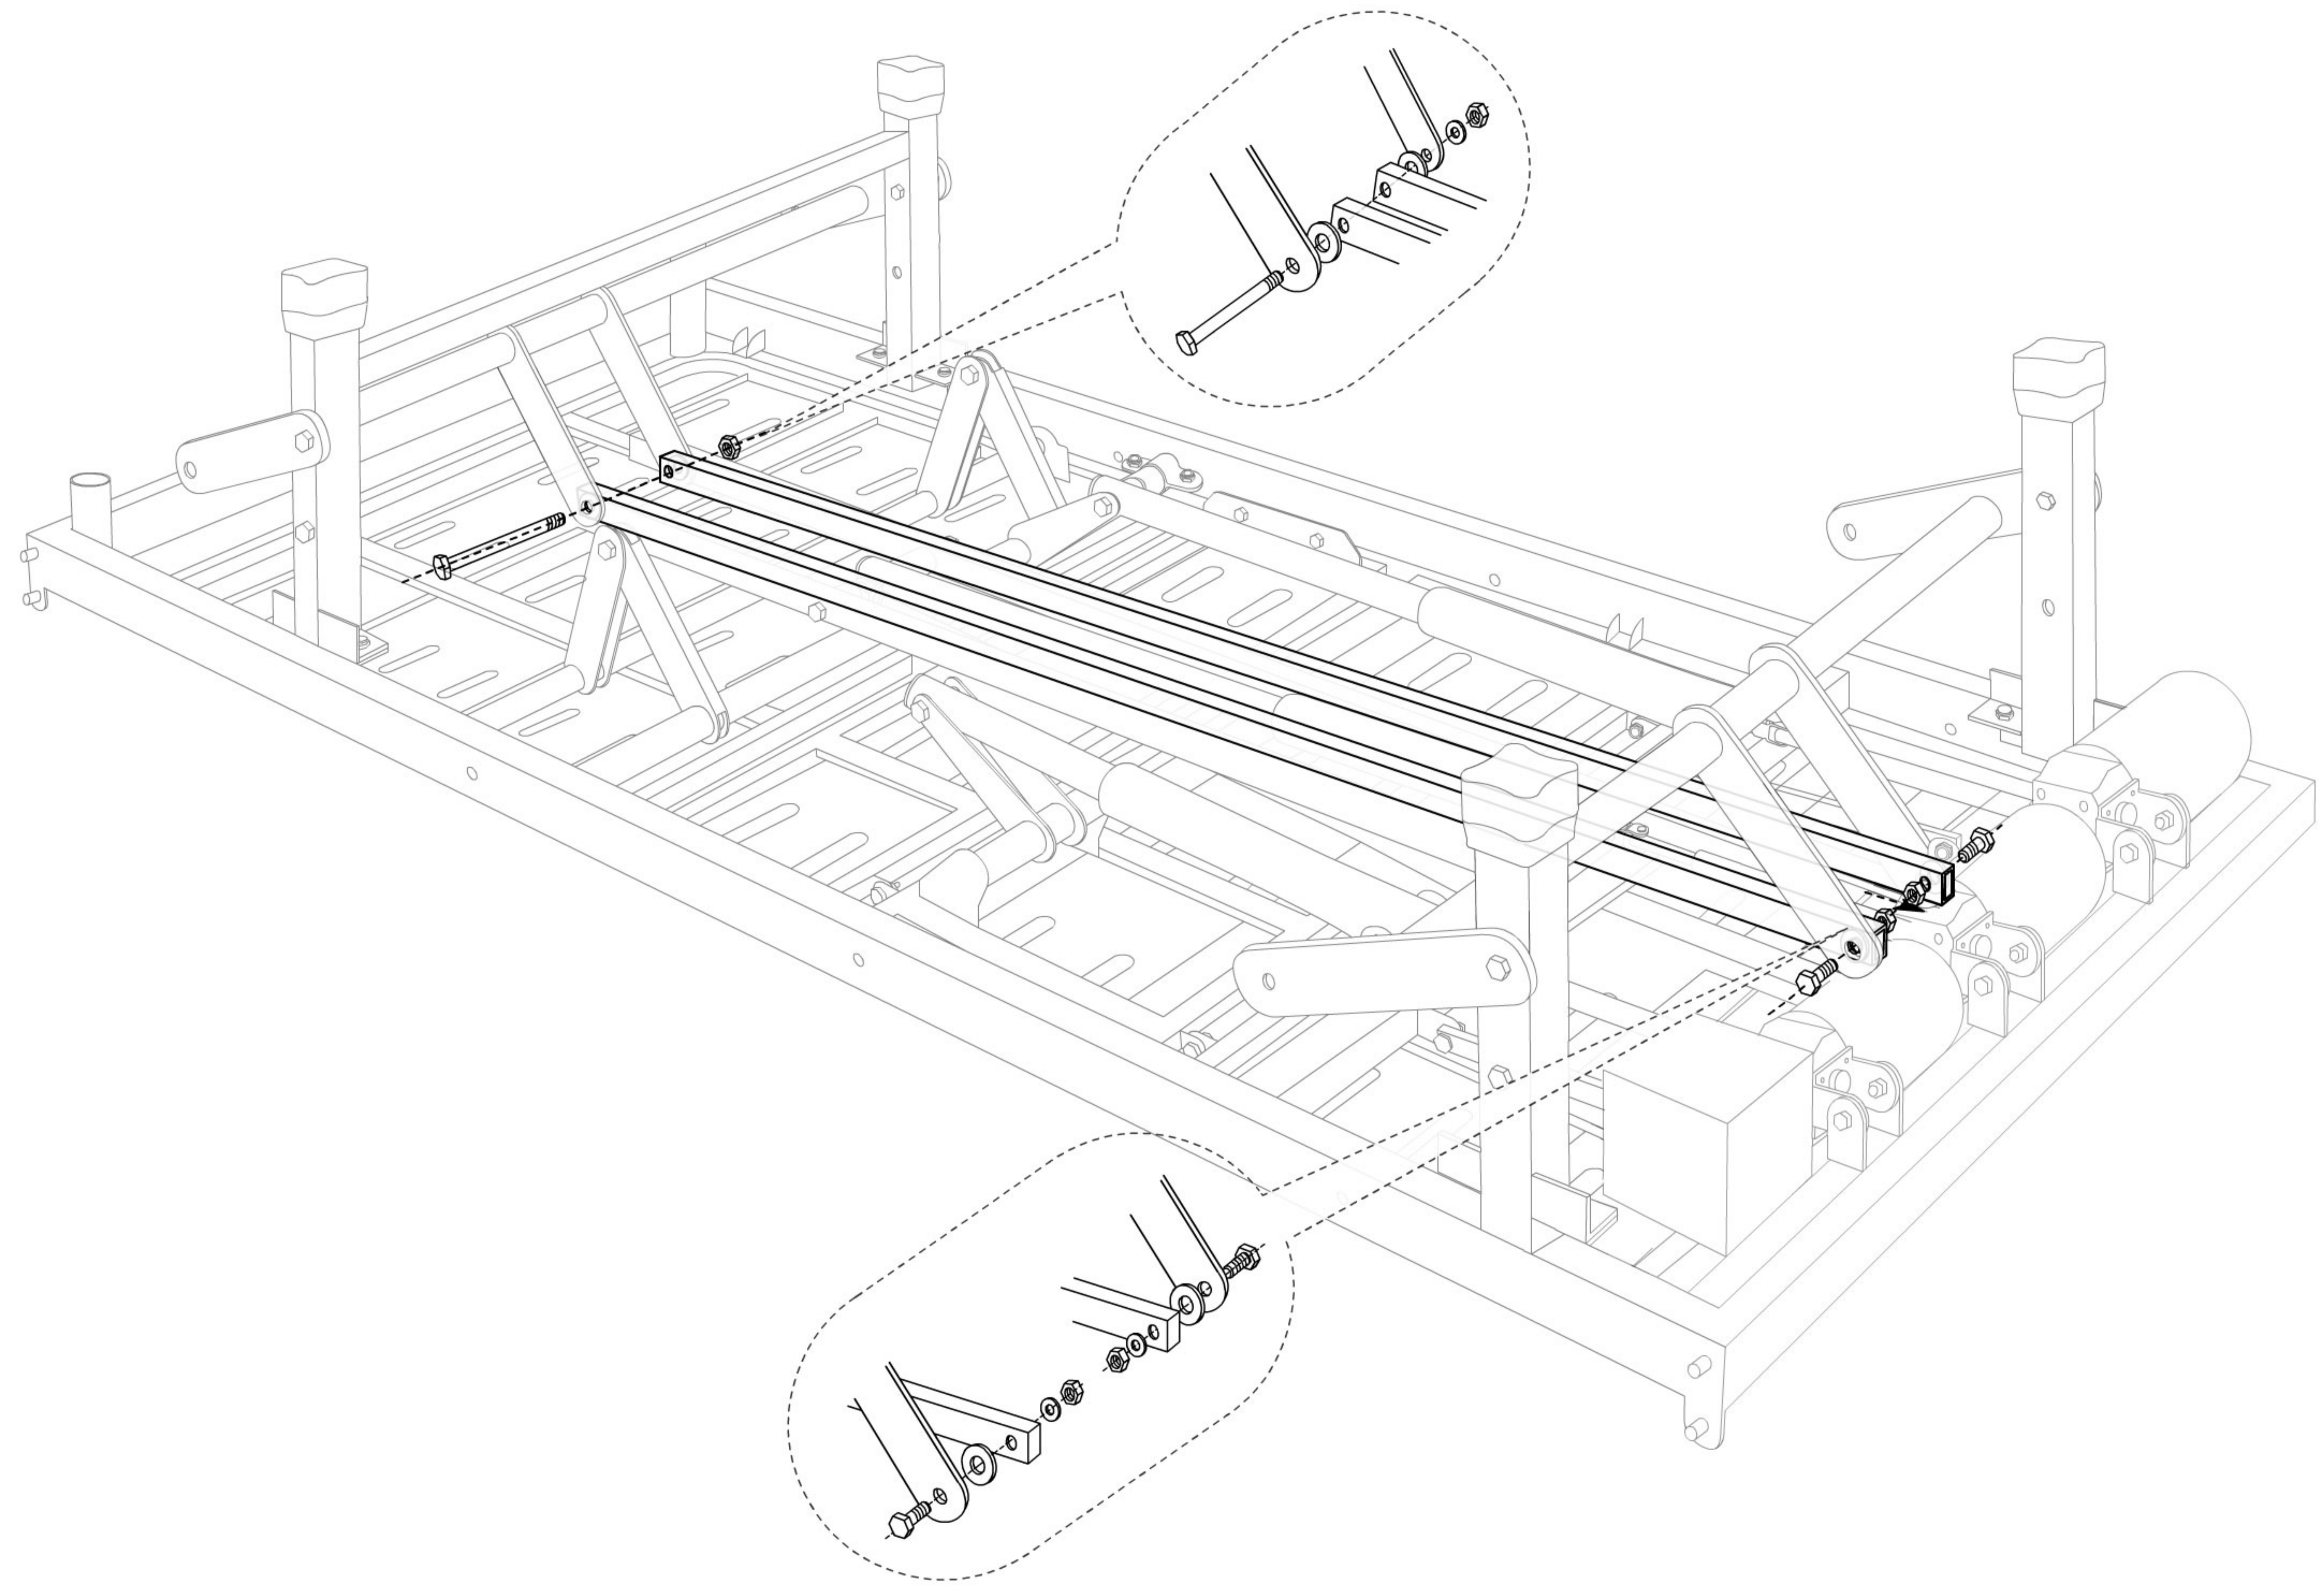


7

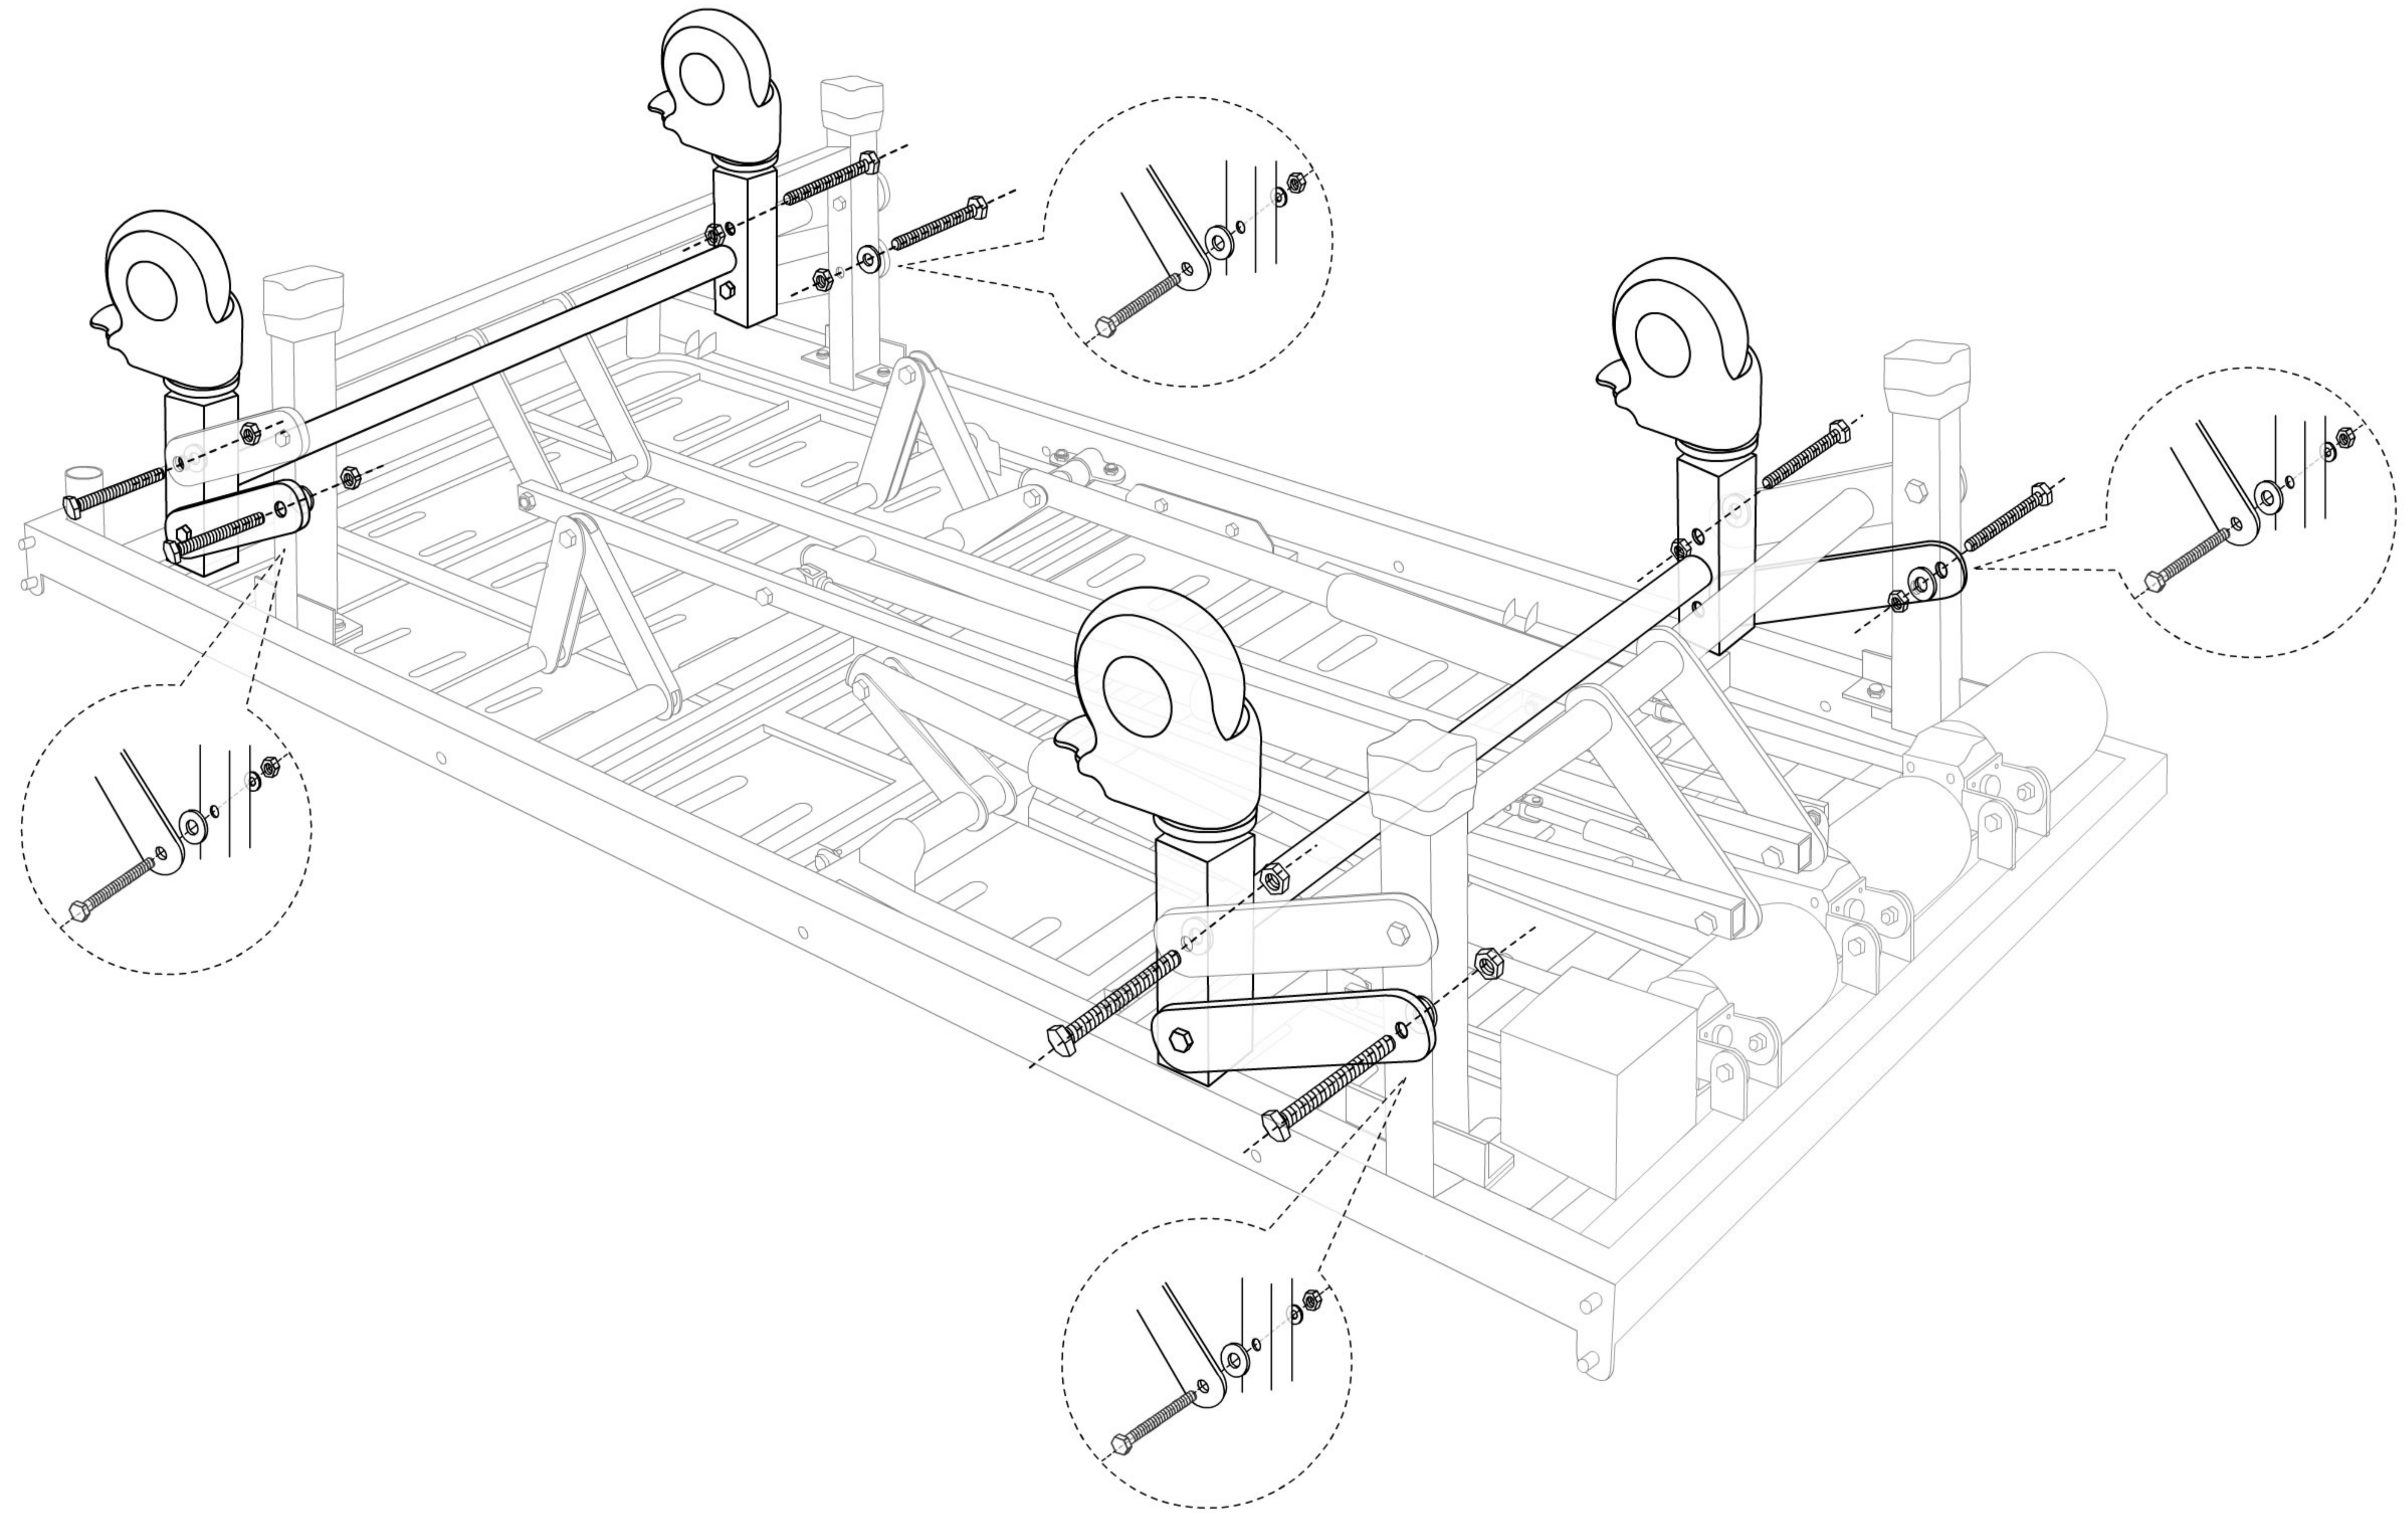





8

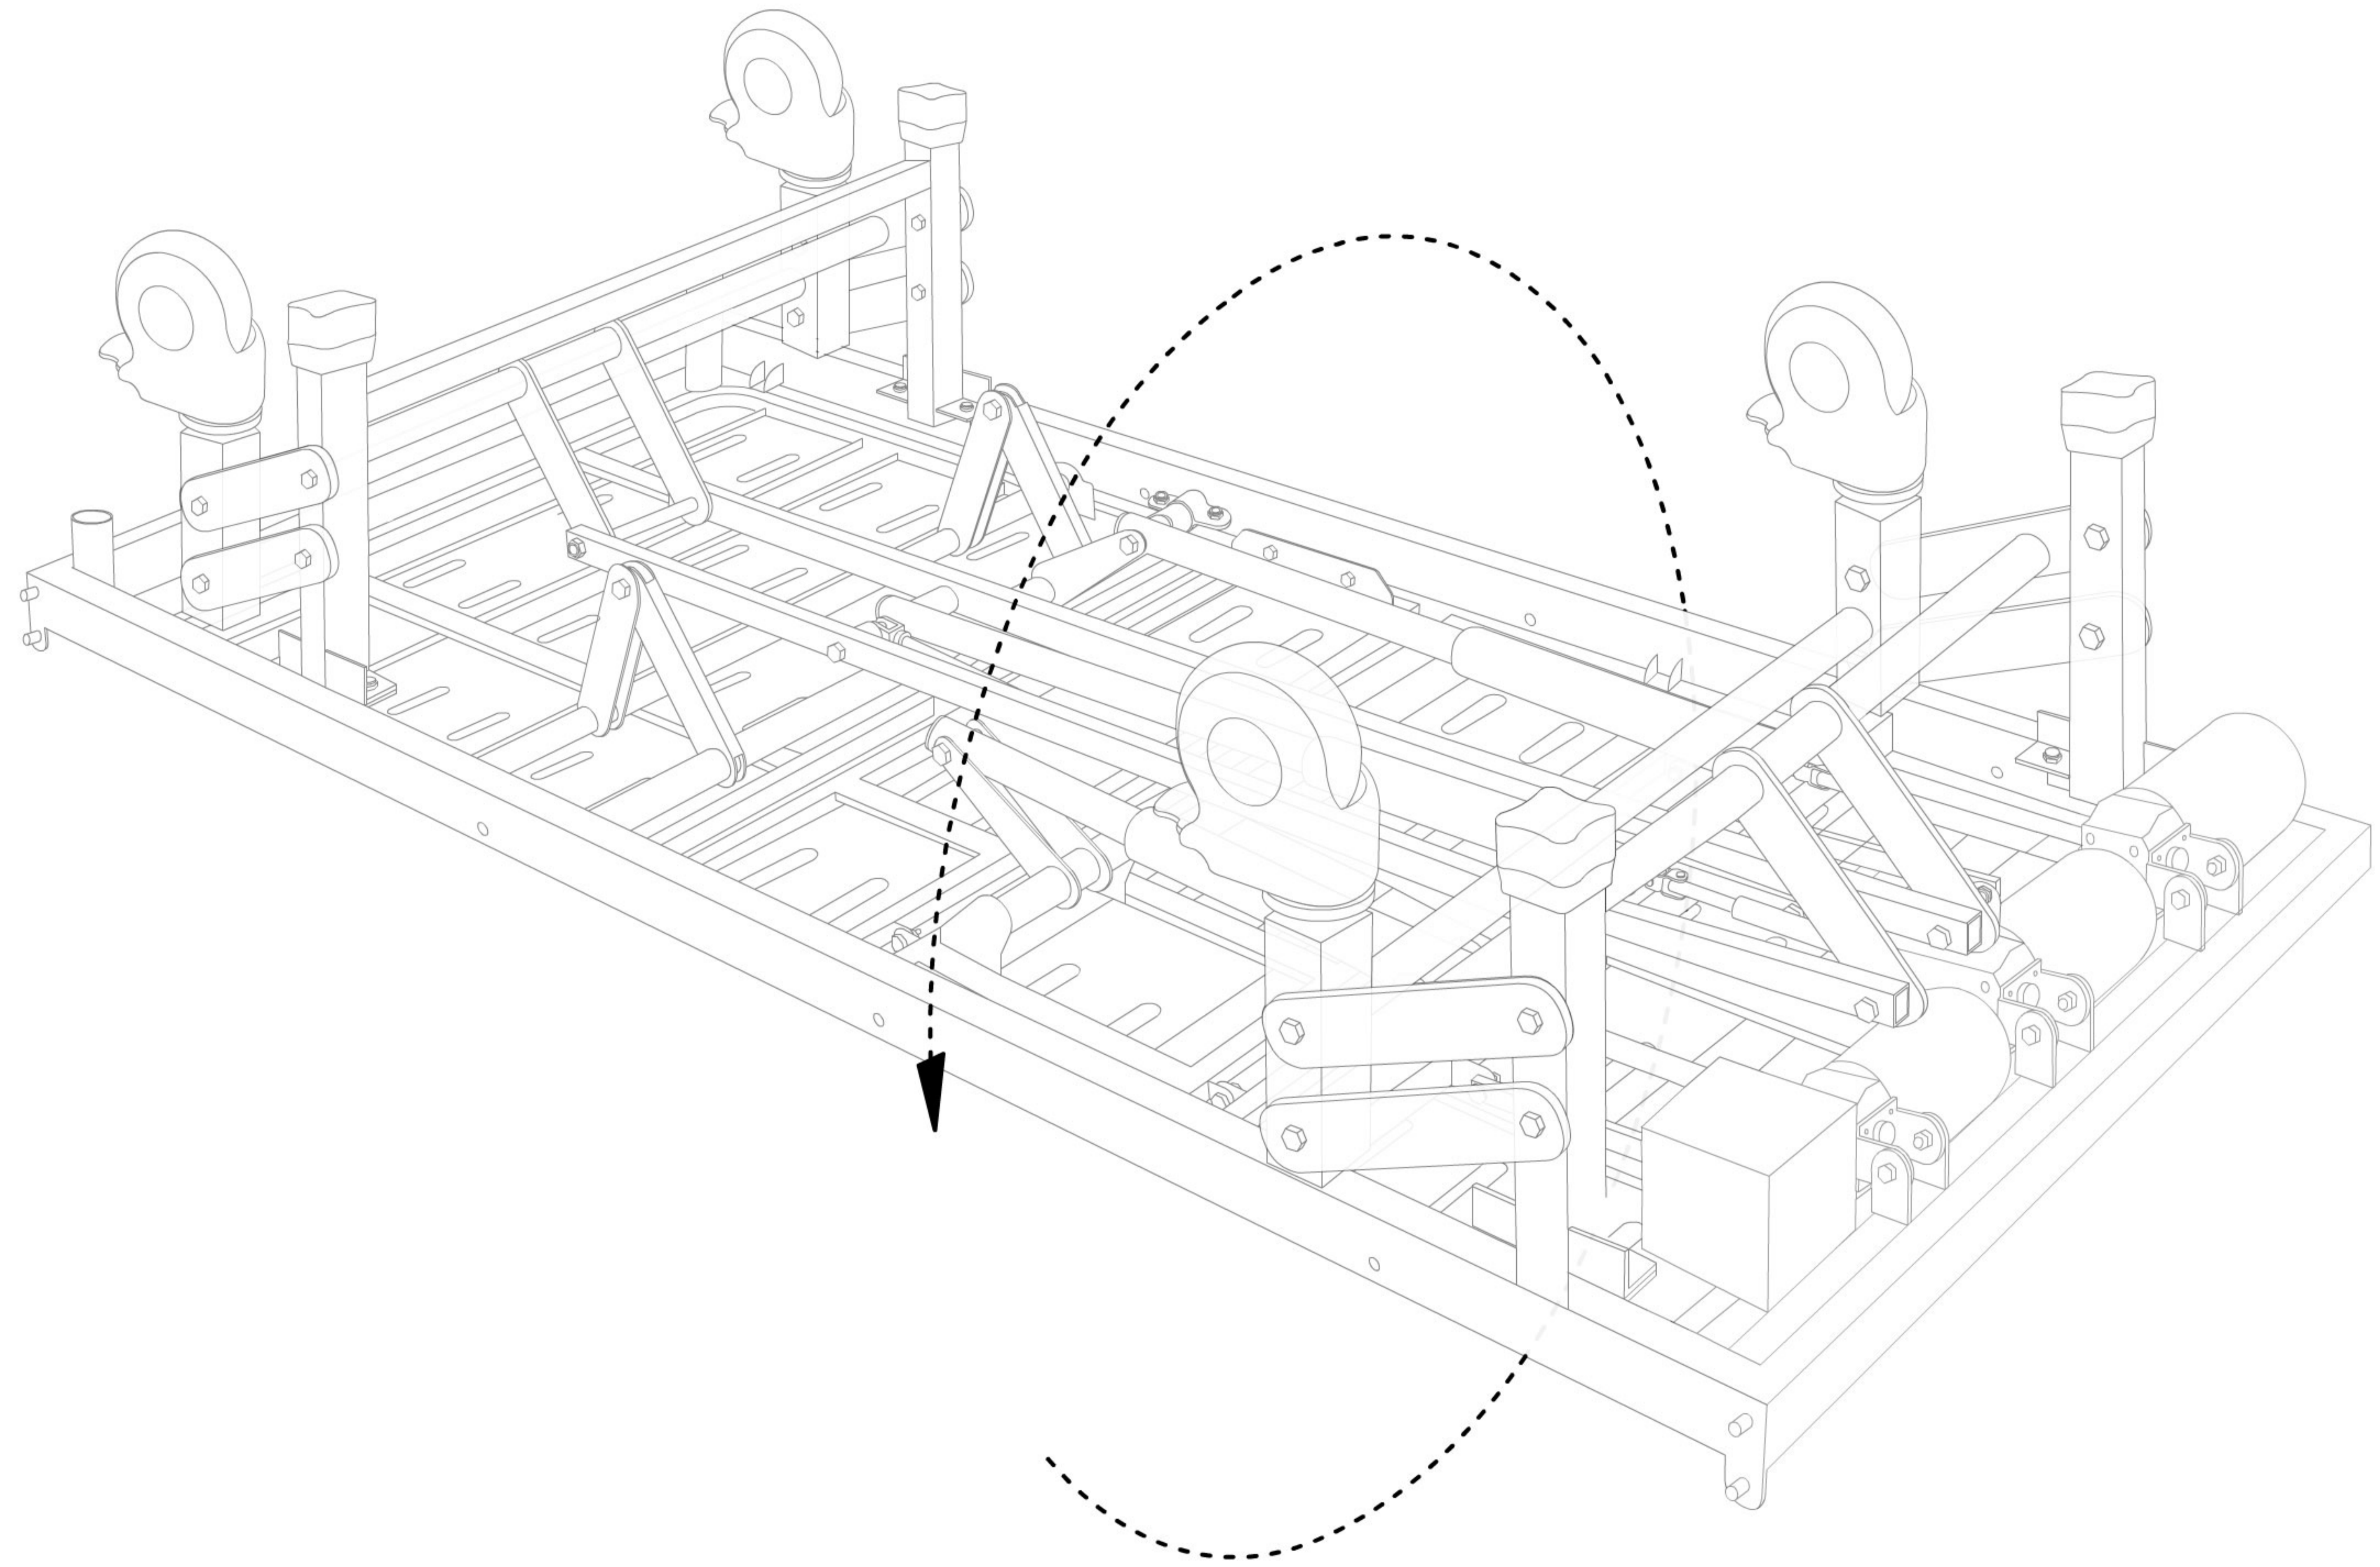


9

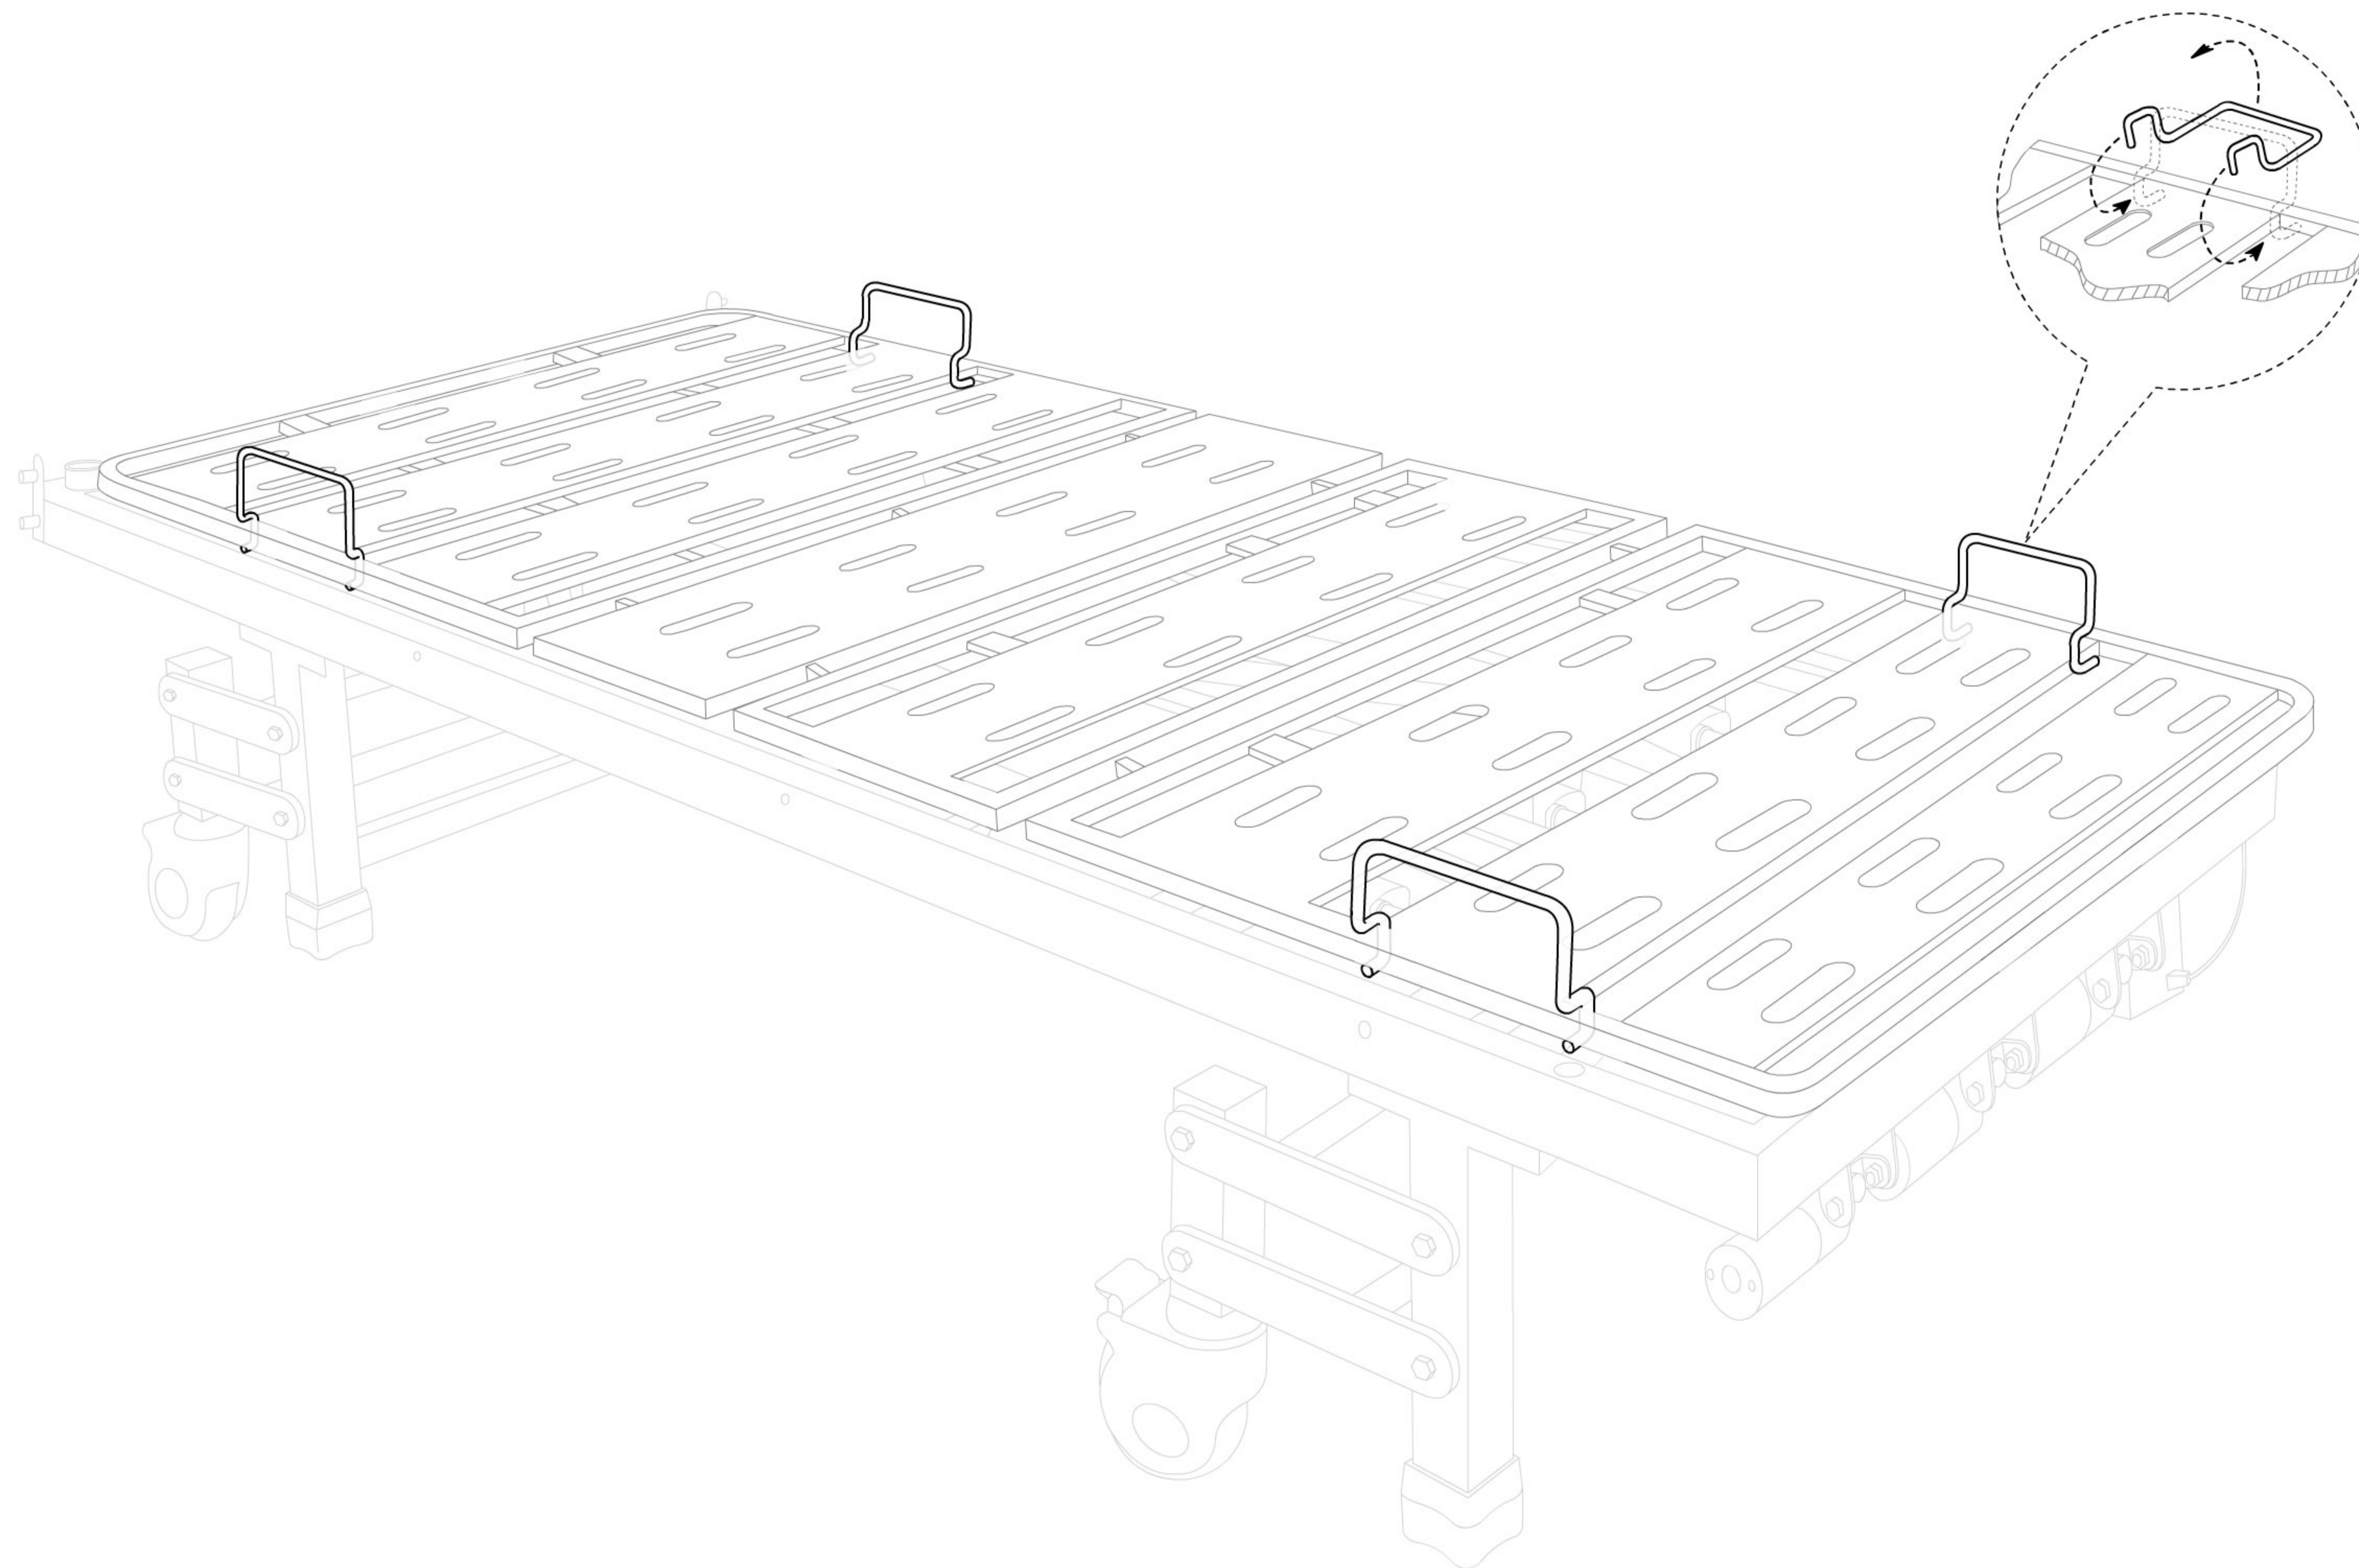


10

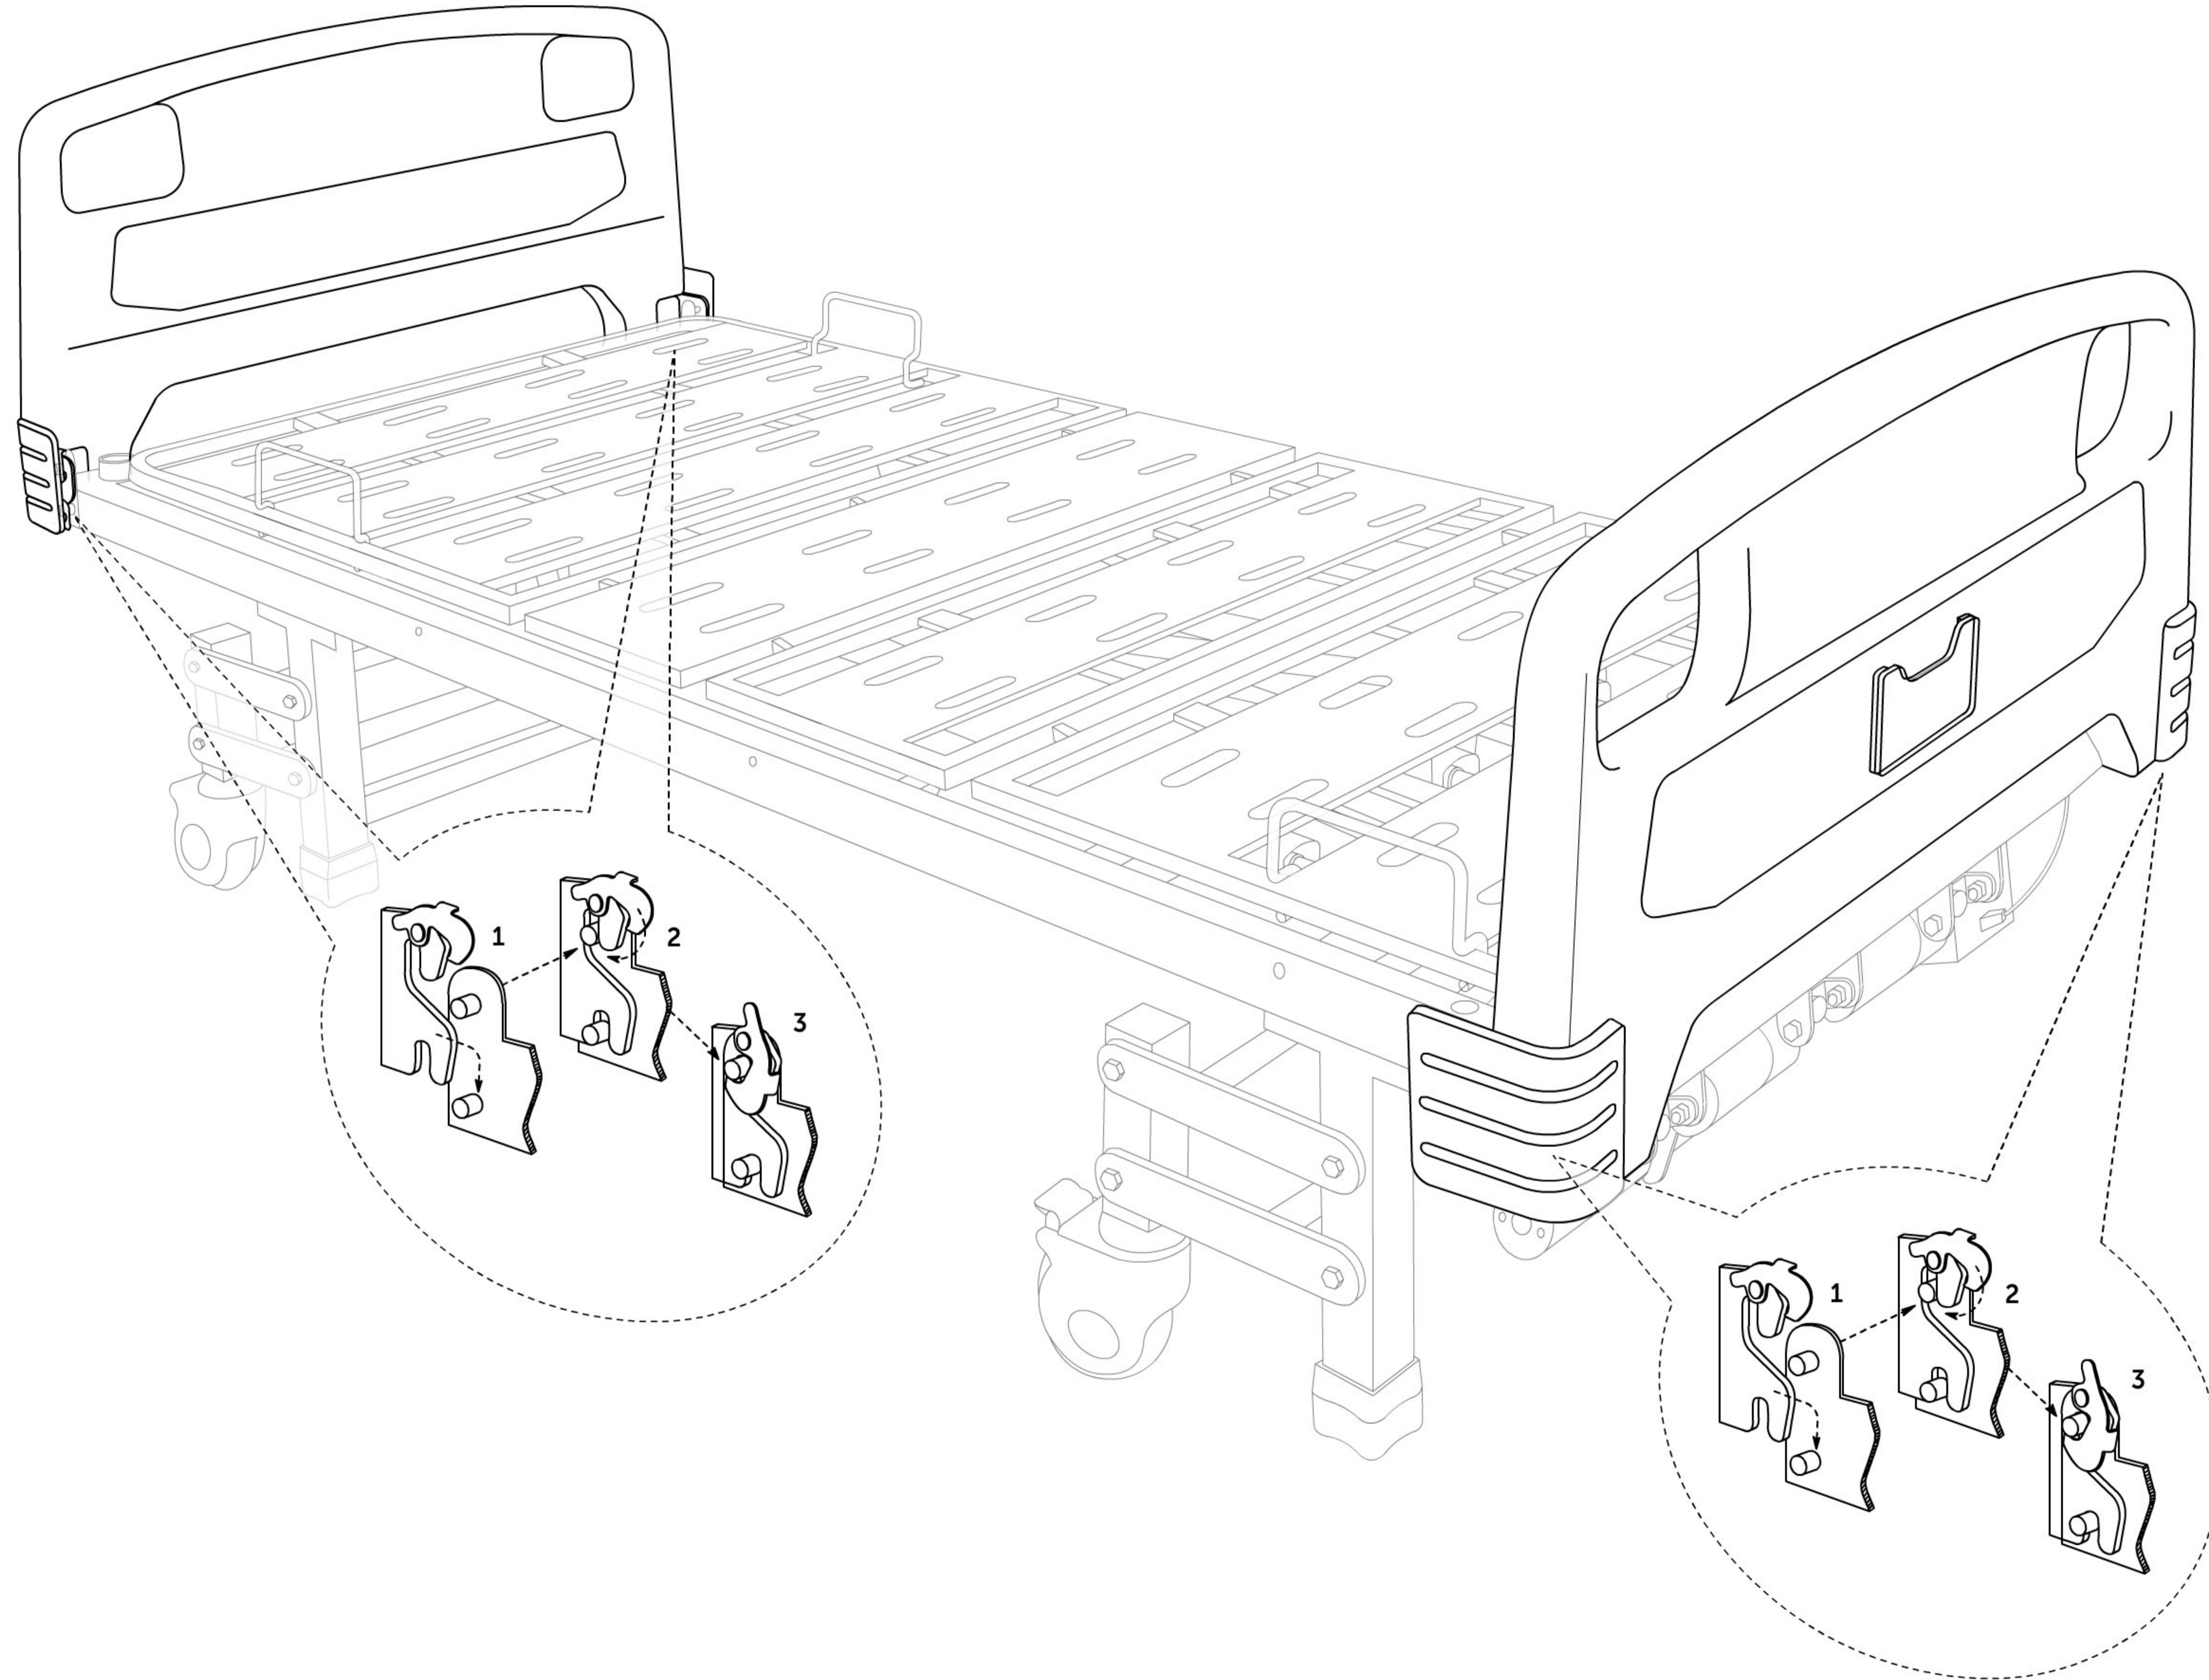


11

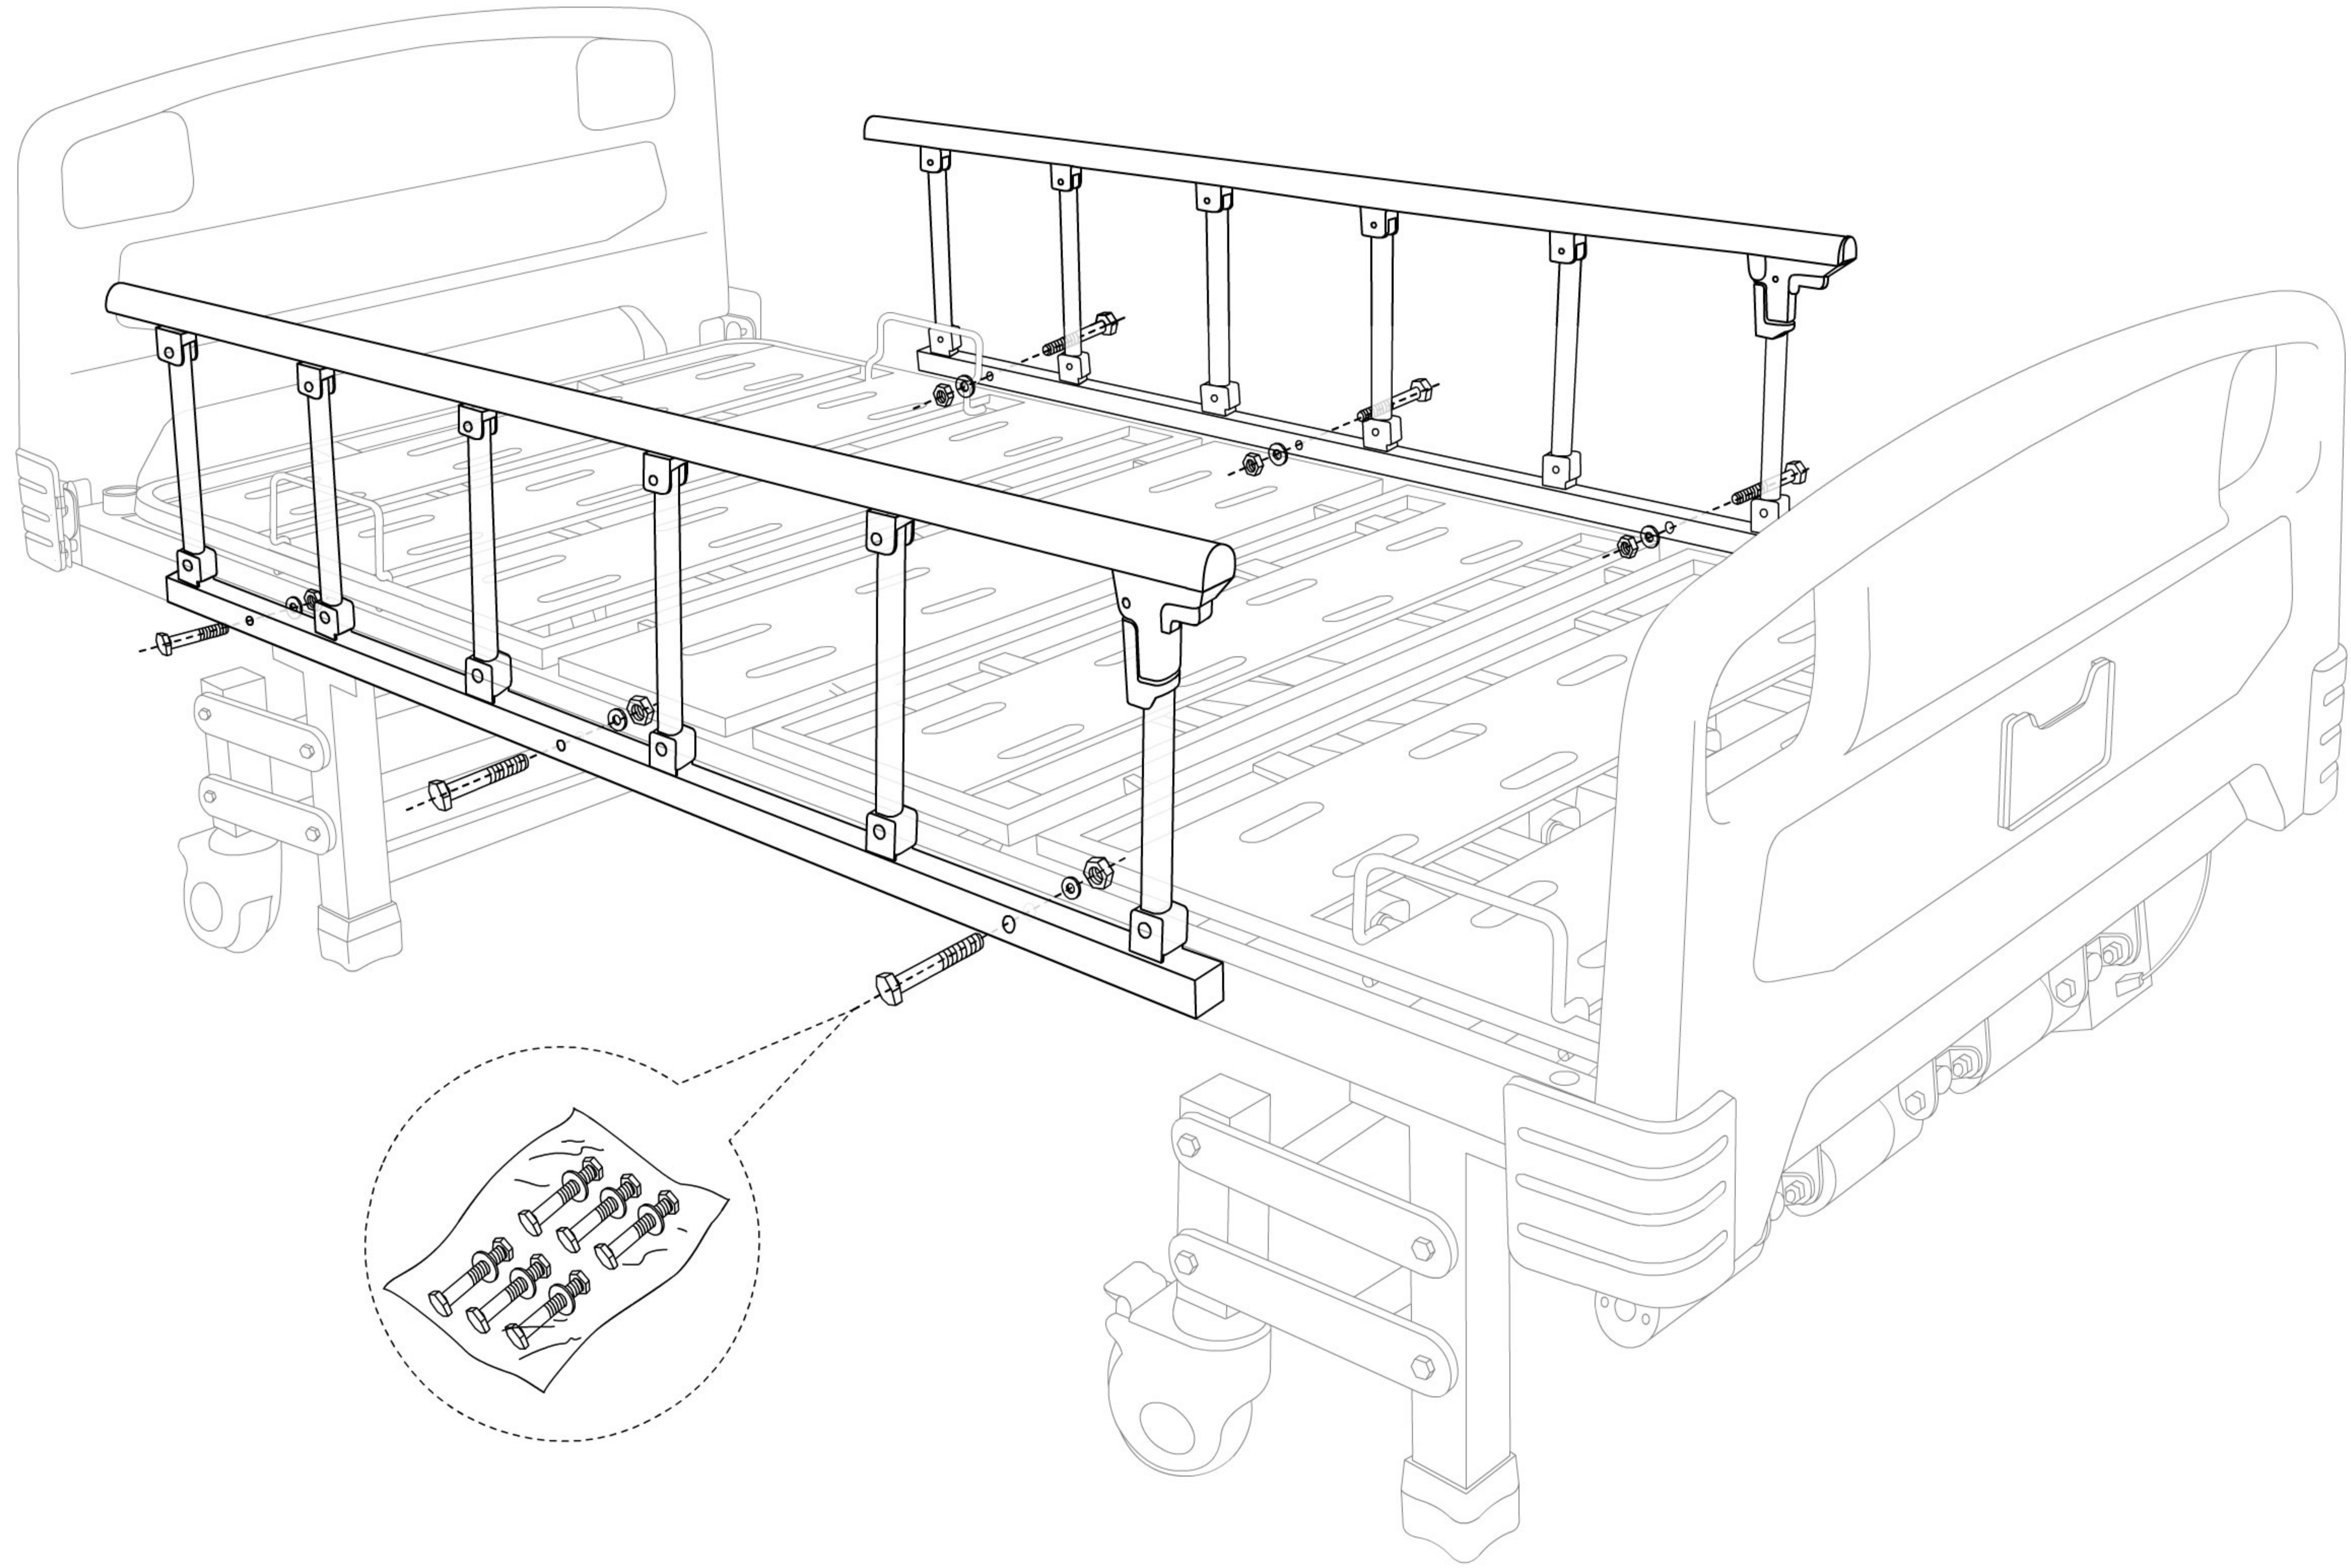


12

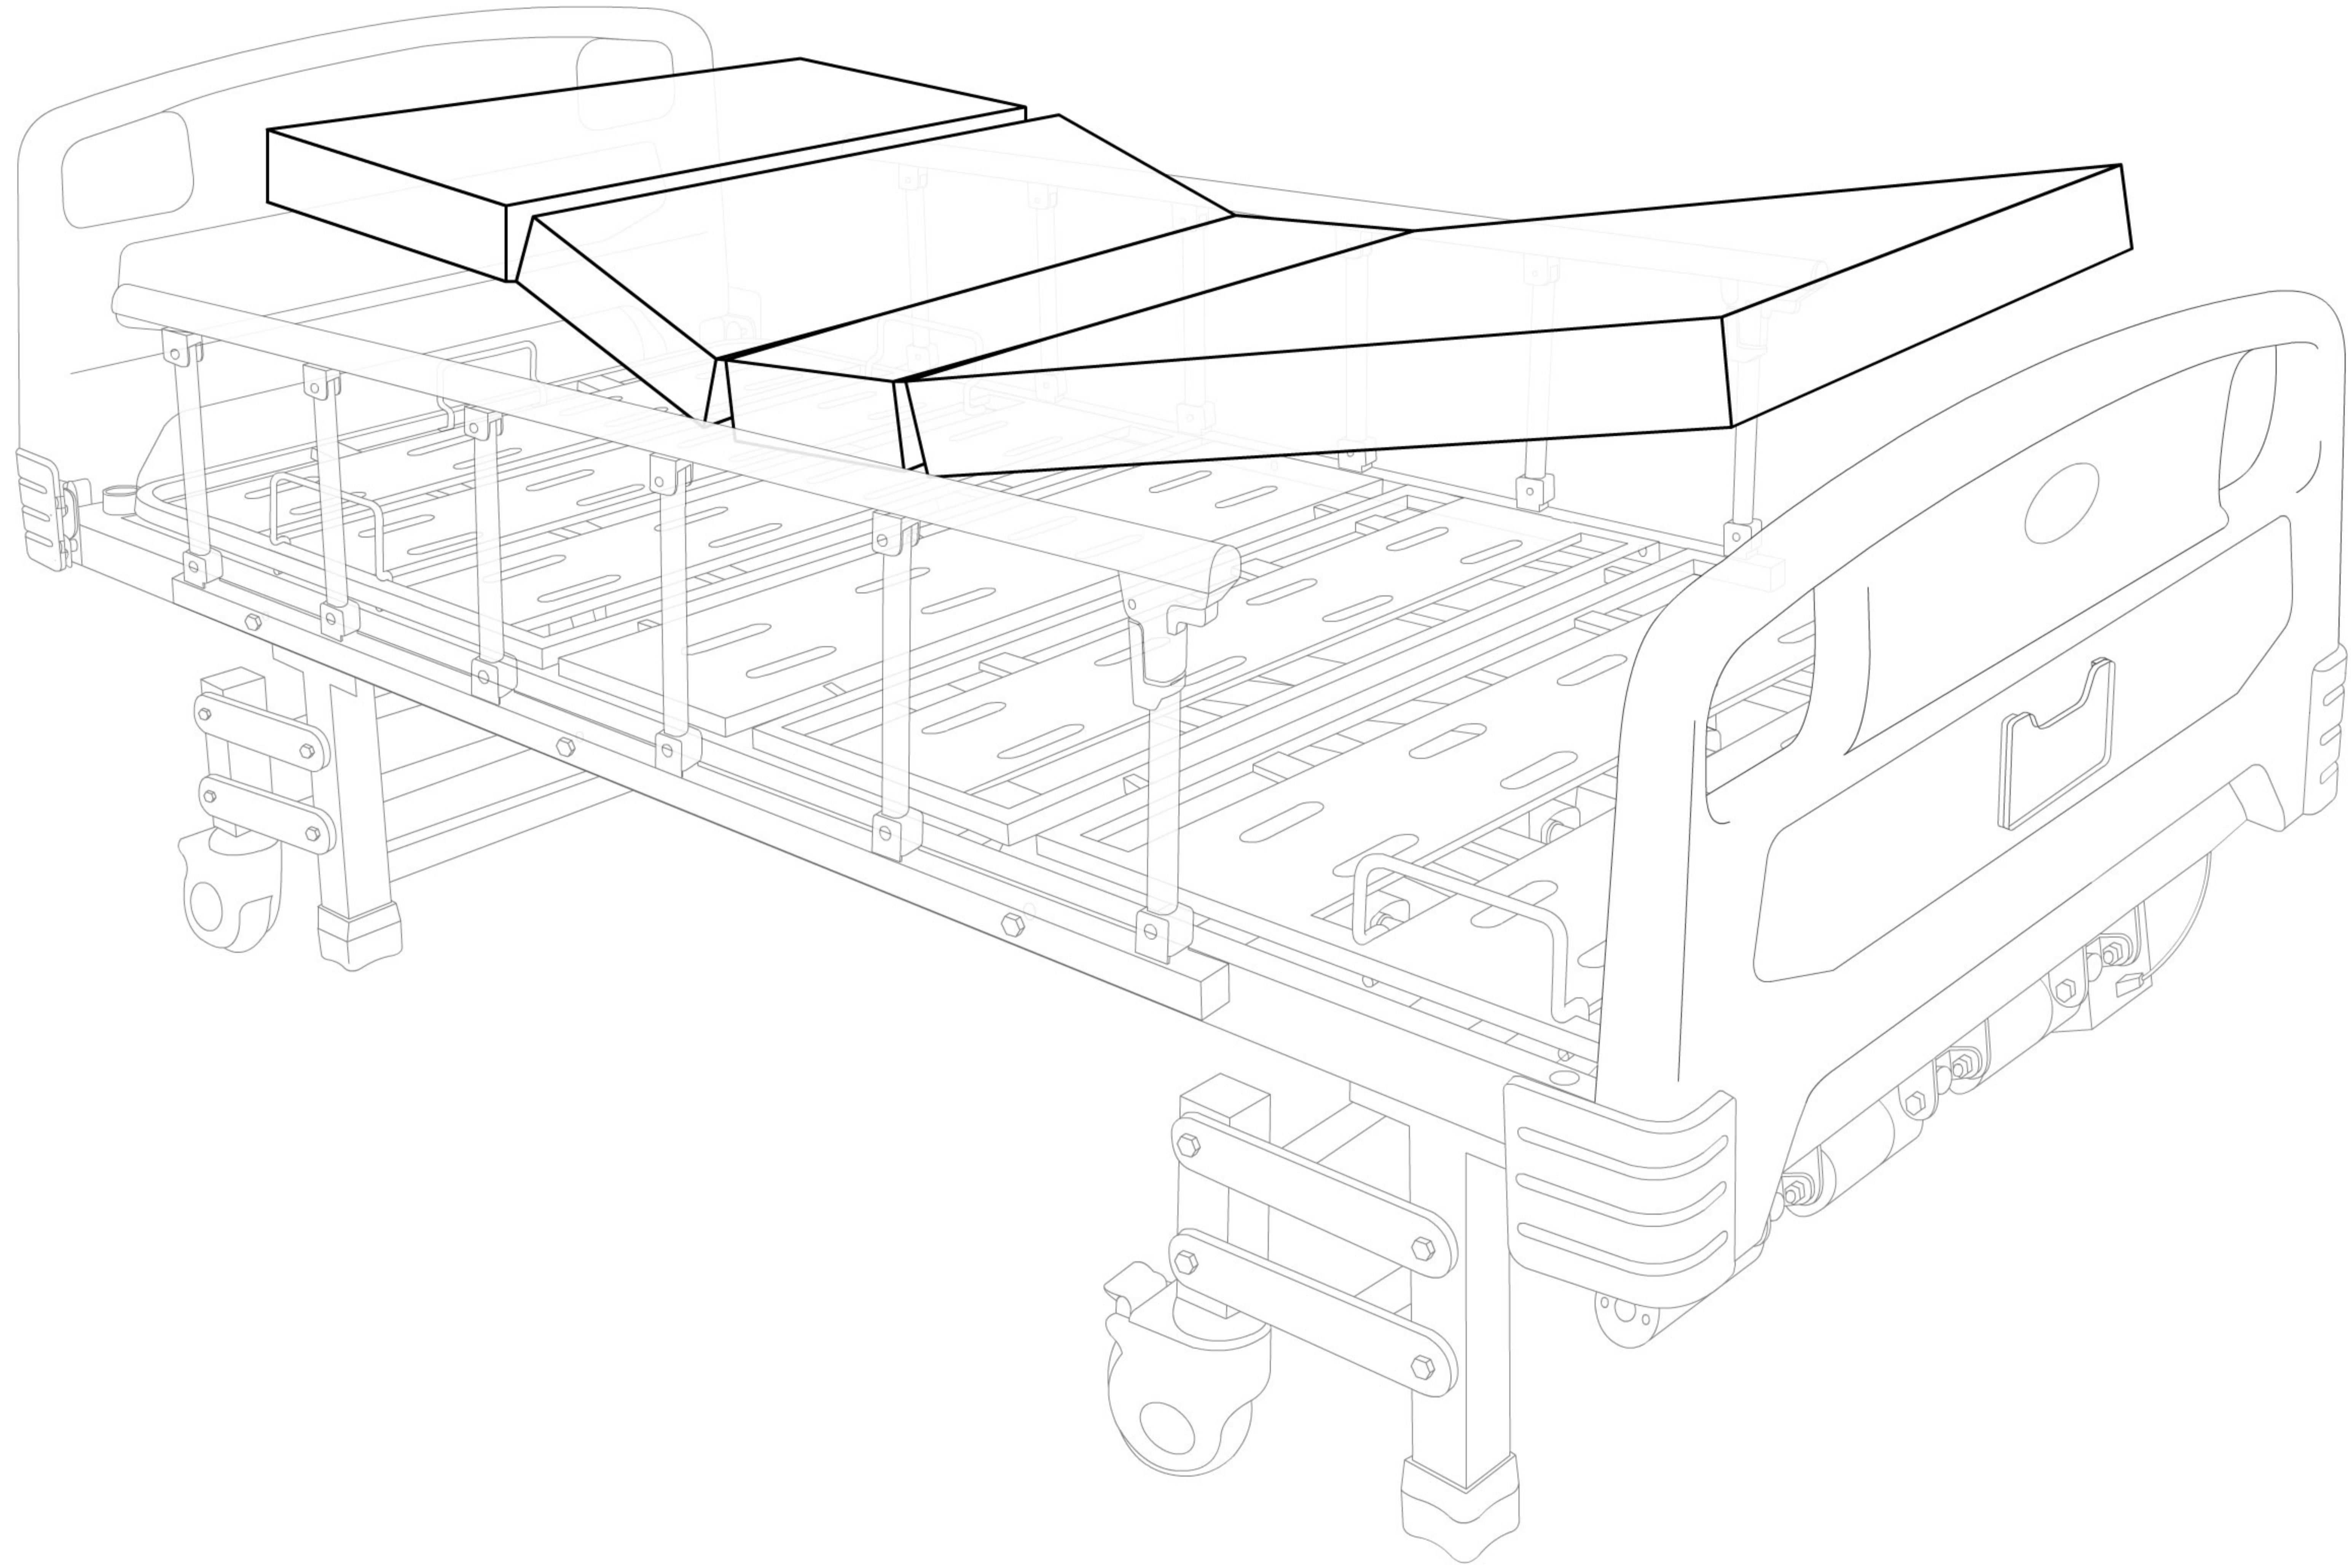

13

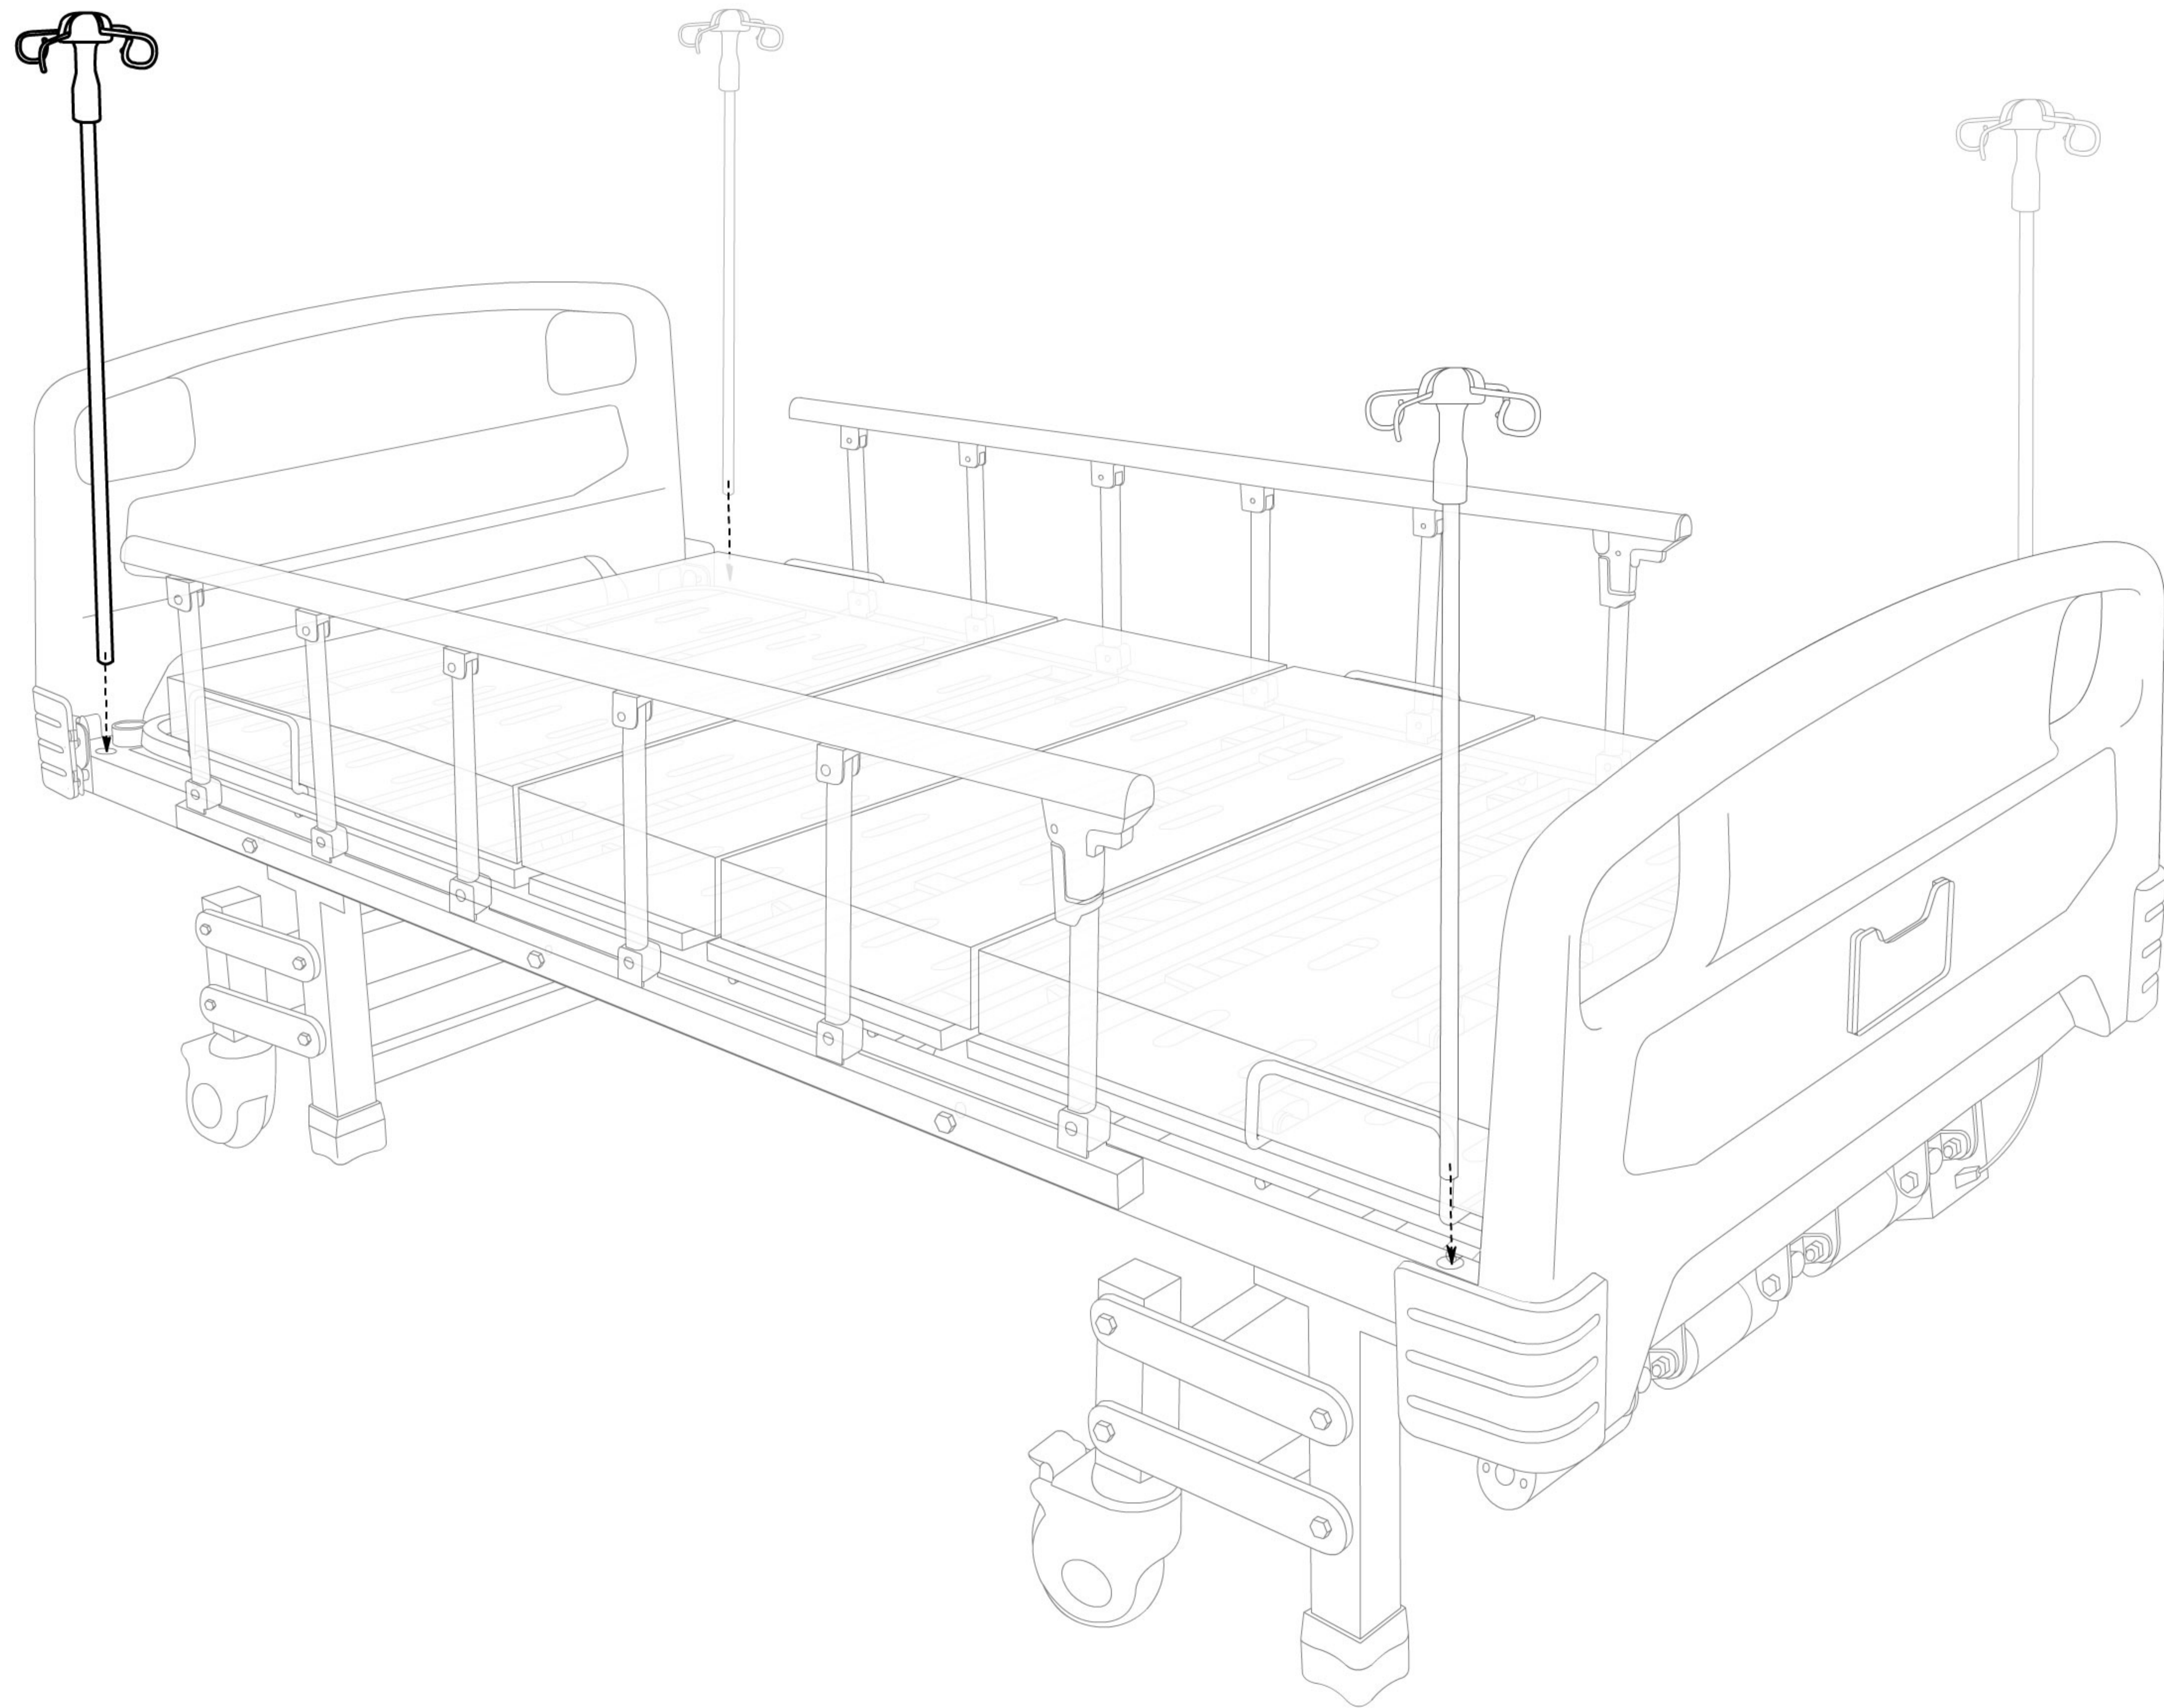

14

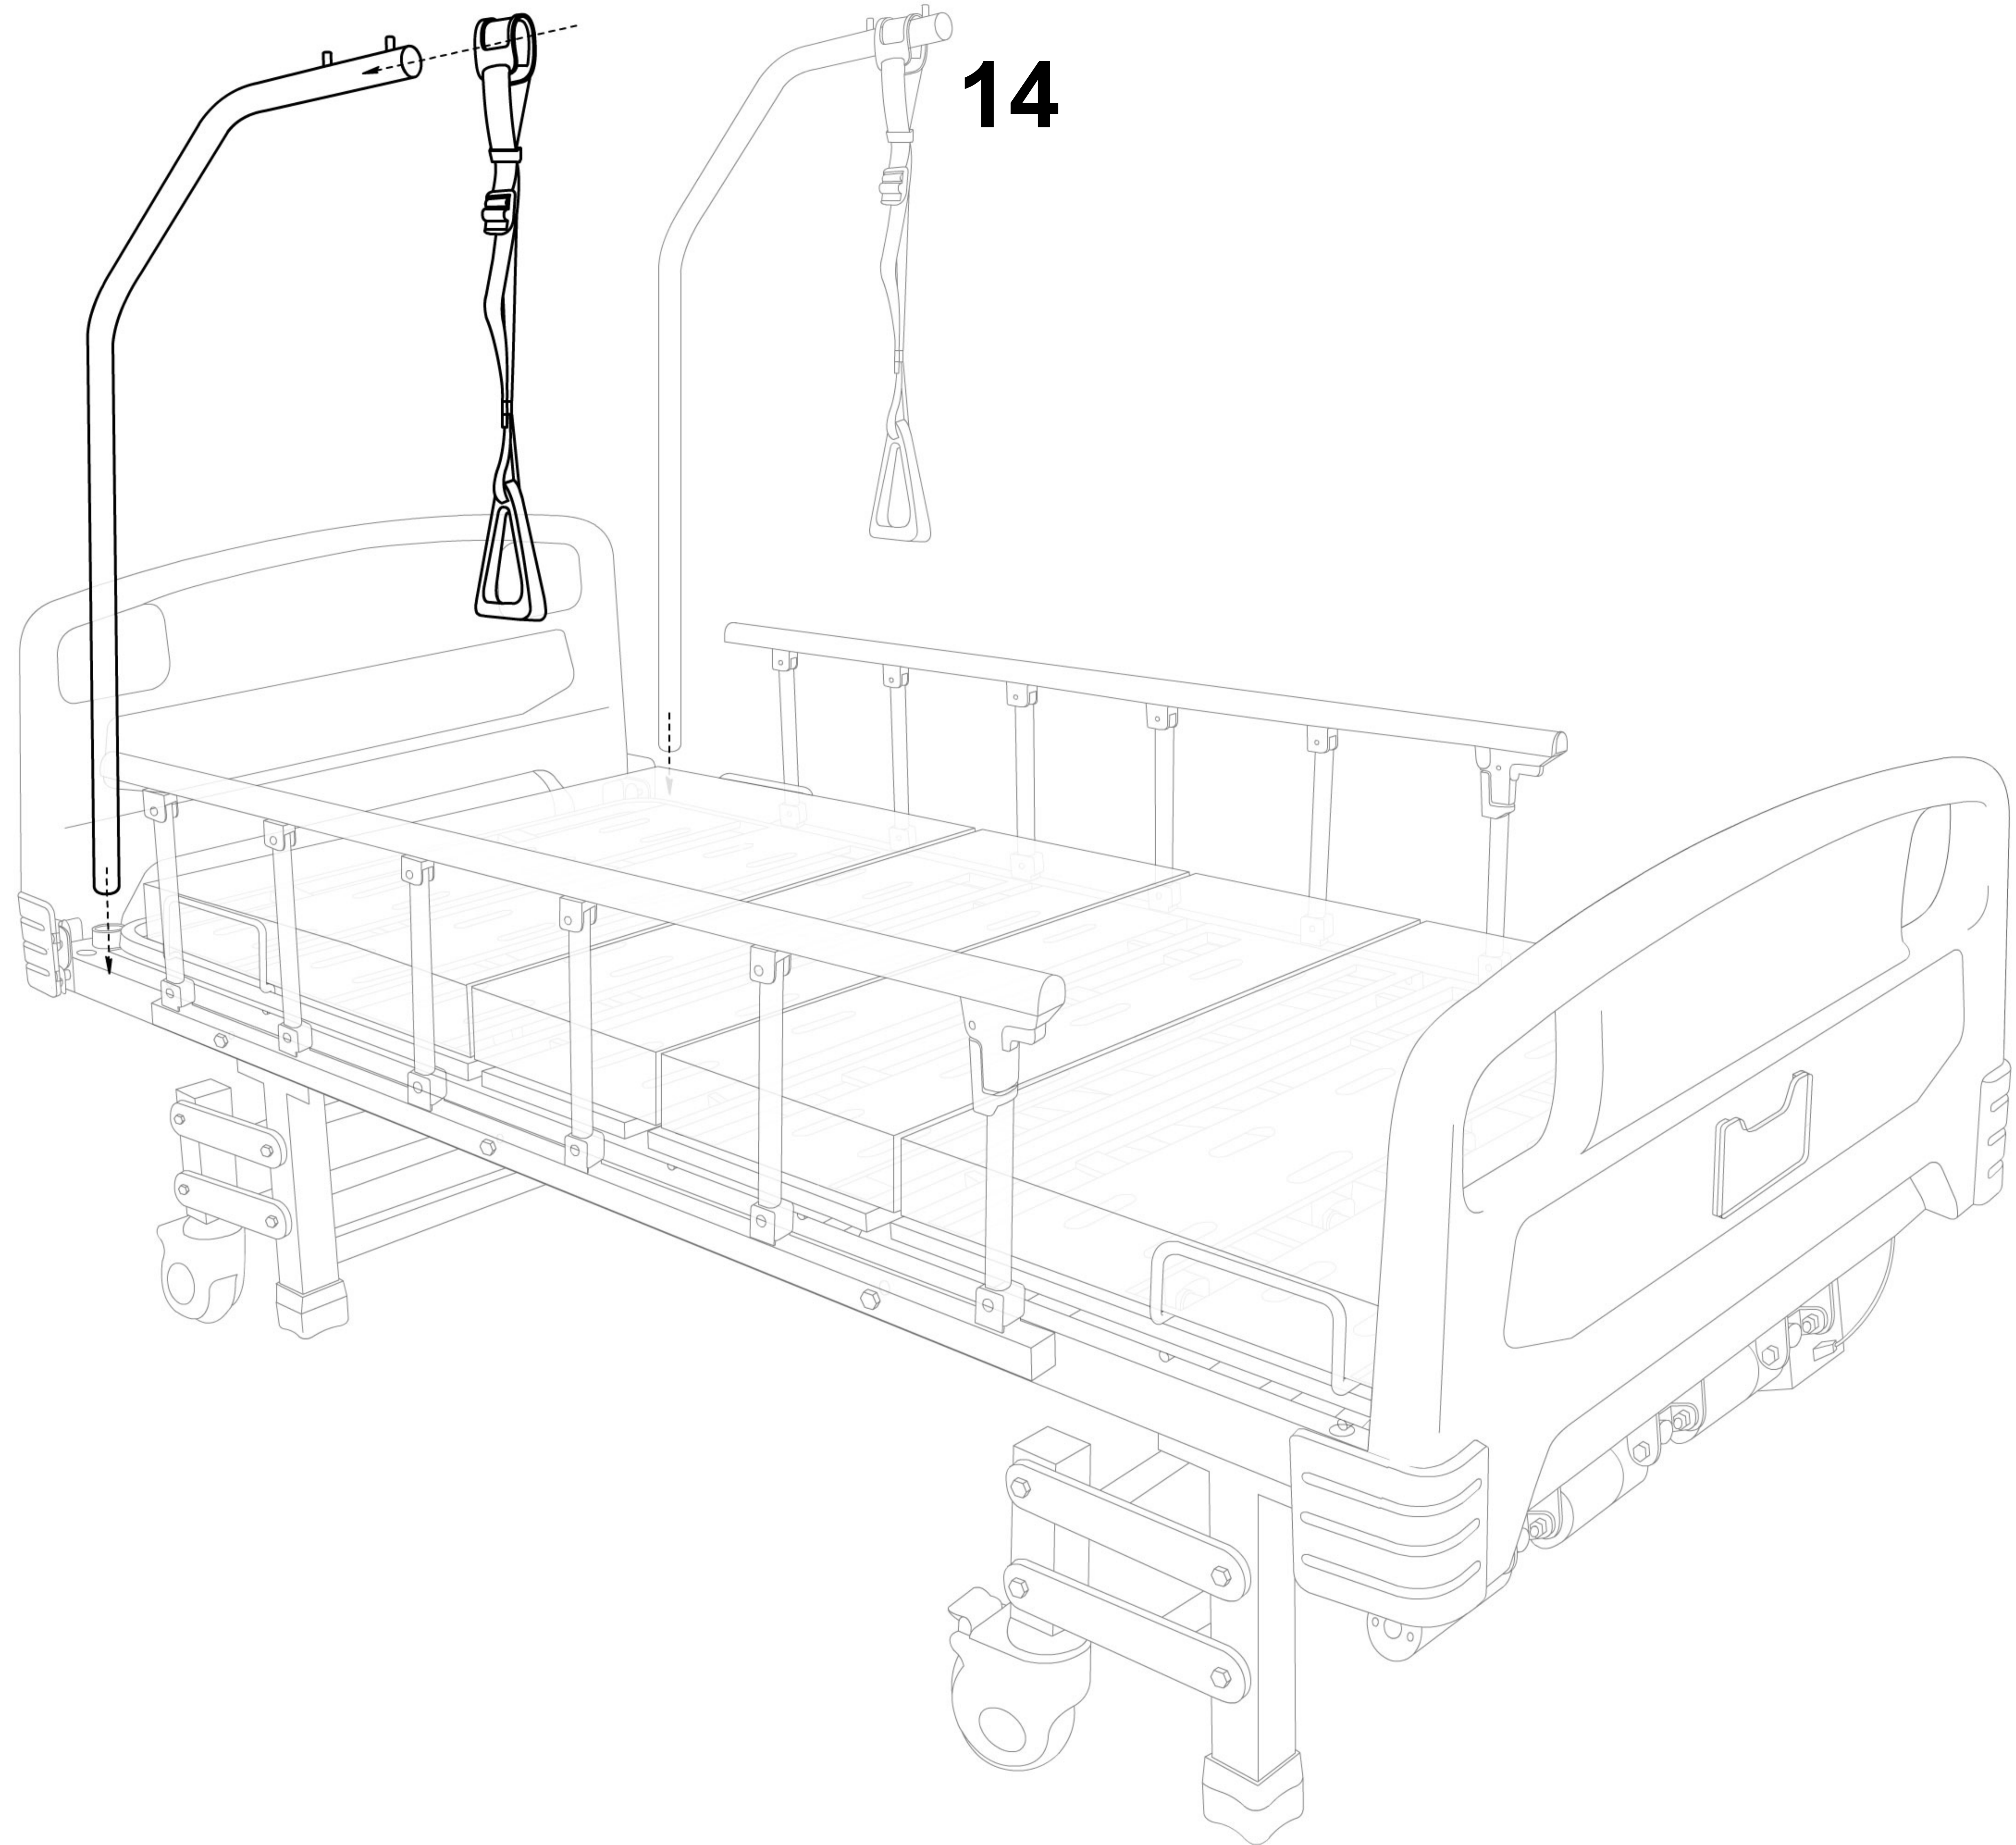

15

